

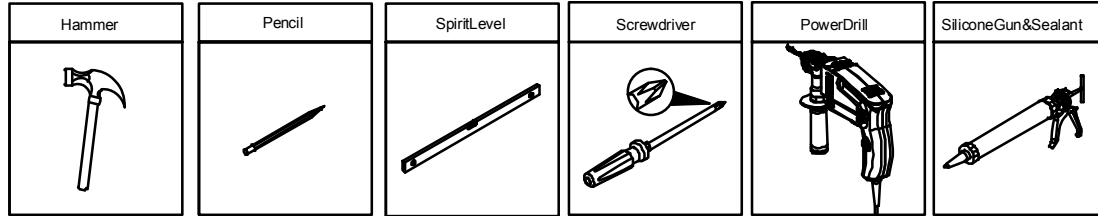


tools




V-1200FC


Assemblyinstrcutionforbathroomcabinet

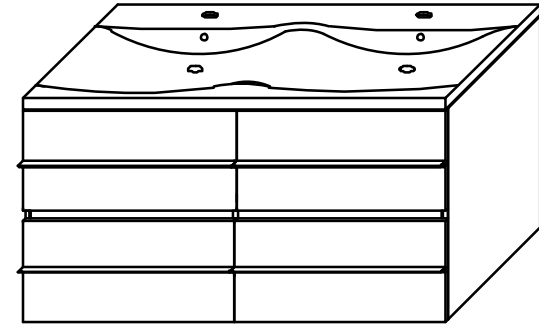


A-1:2X




A-2:2X

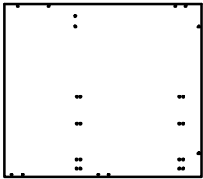


B:2X

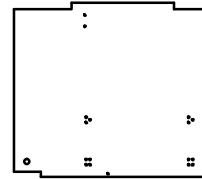


C:1X

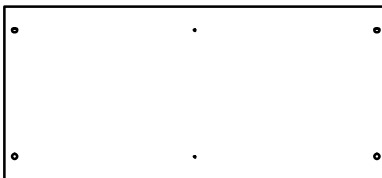


D:1X



E:1X



F:2X



G:1X



H:1X



I-1:8X



I-2:4X



K-1:4X




J:2X



K-2:2X




L:2X





M:4X





N:2X




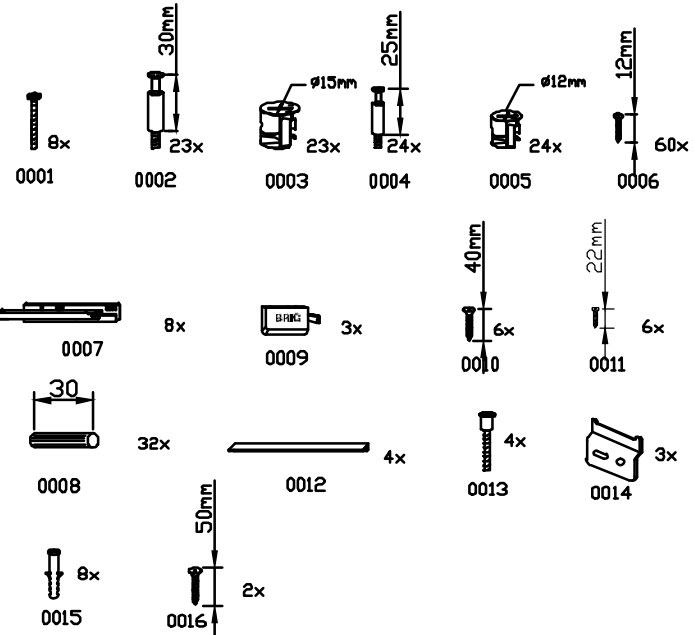


1

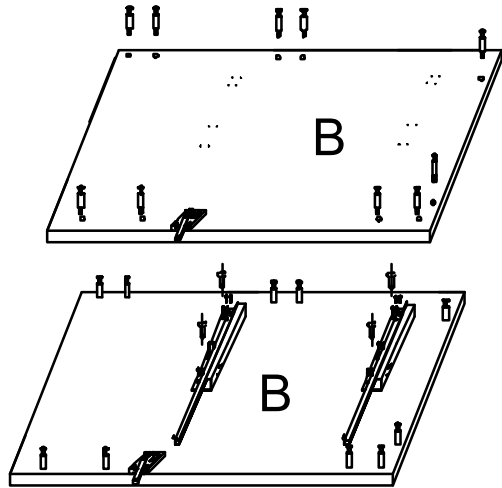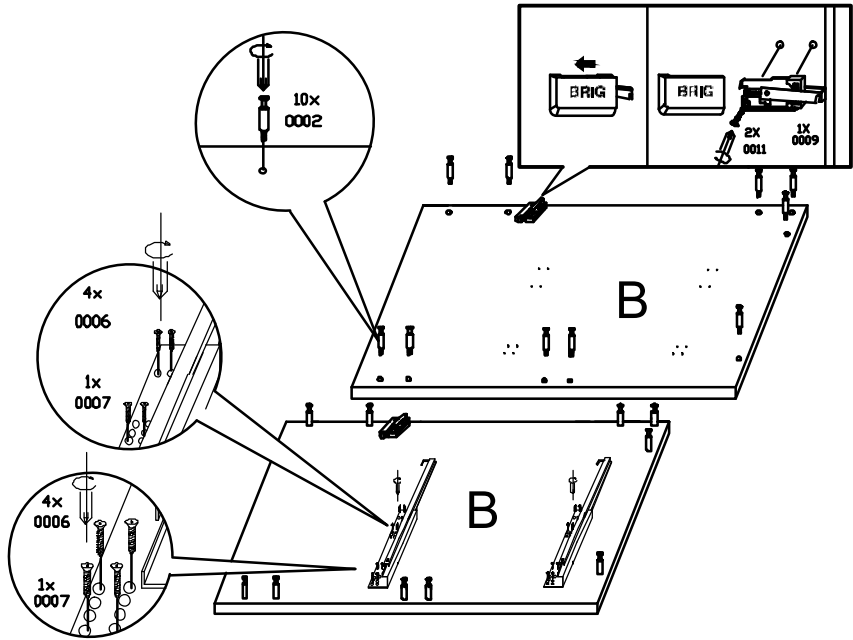


2

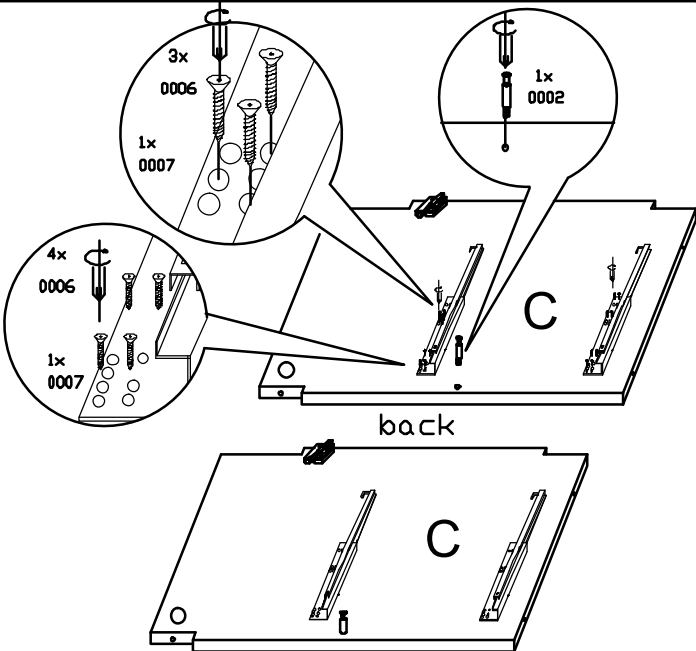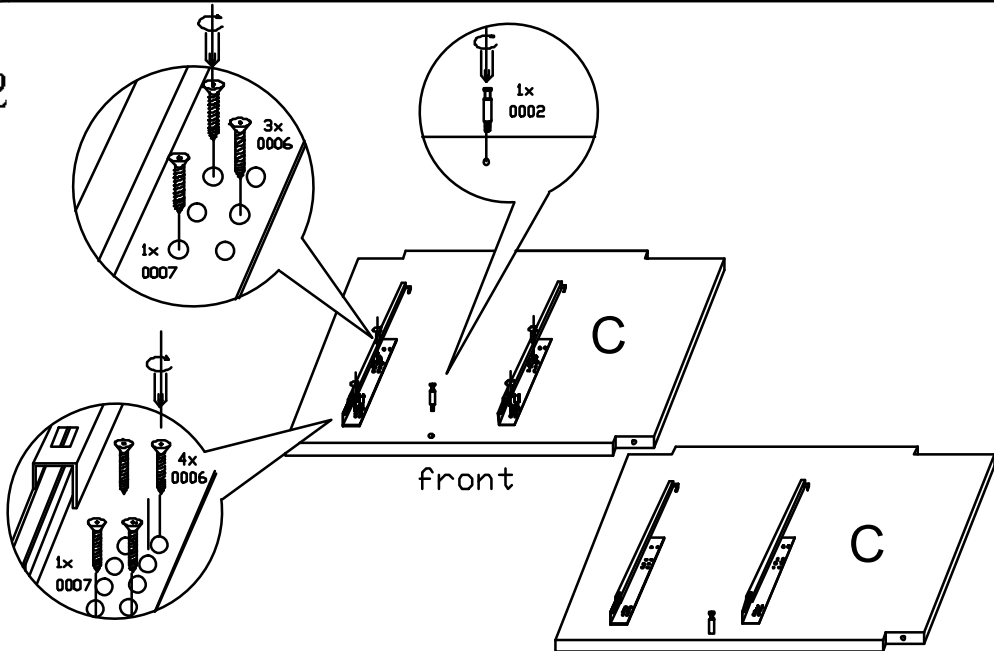

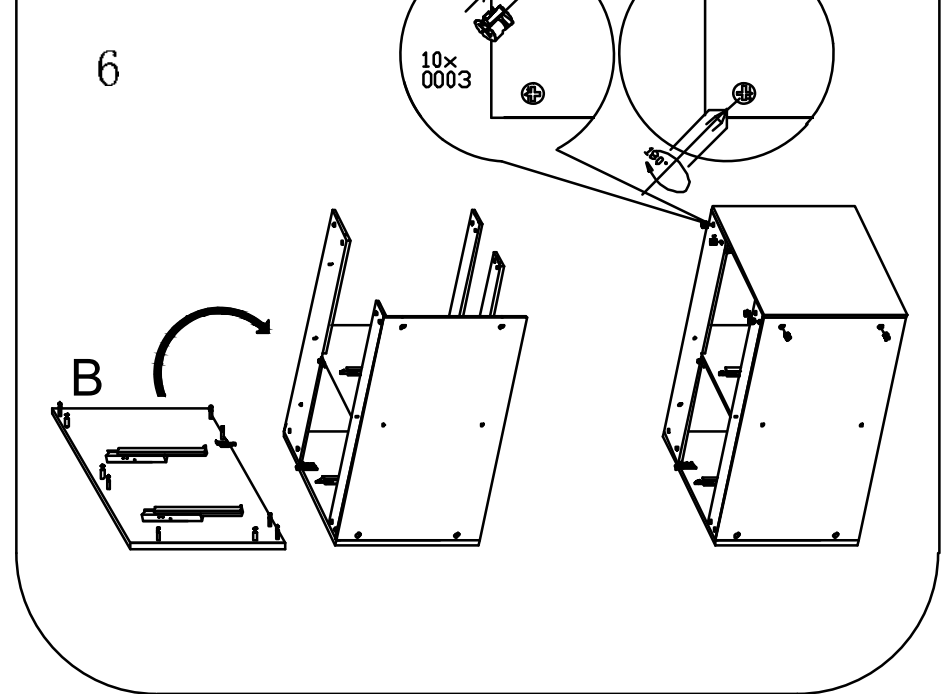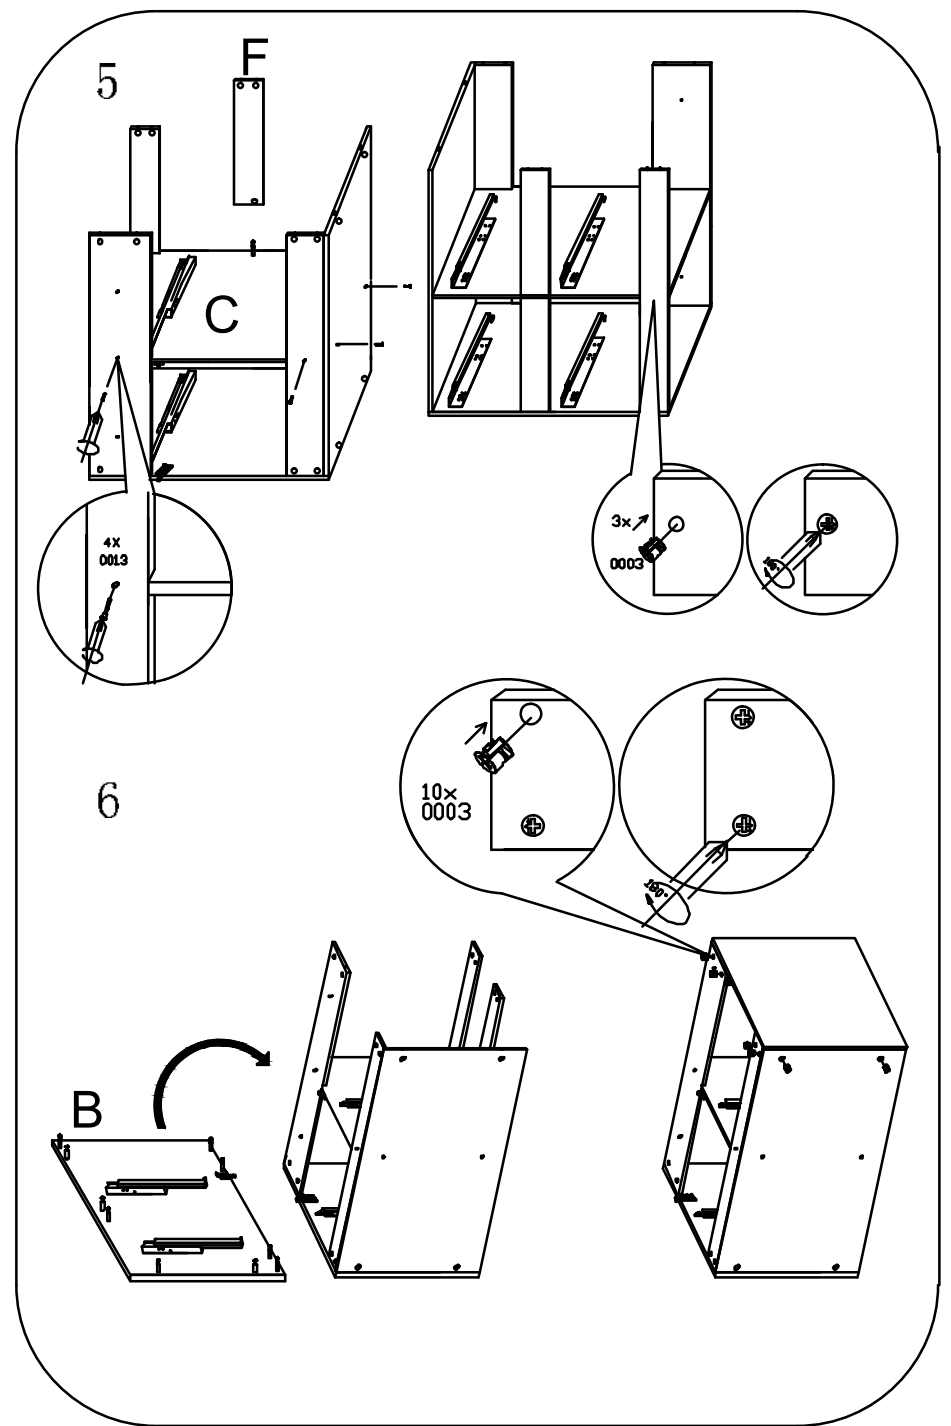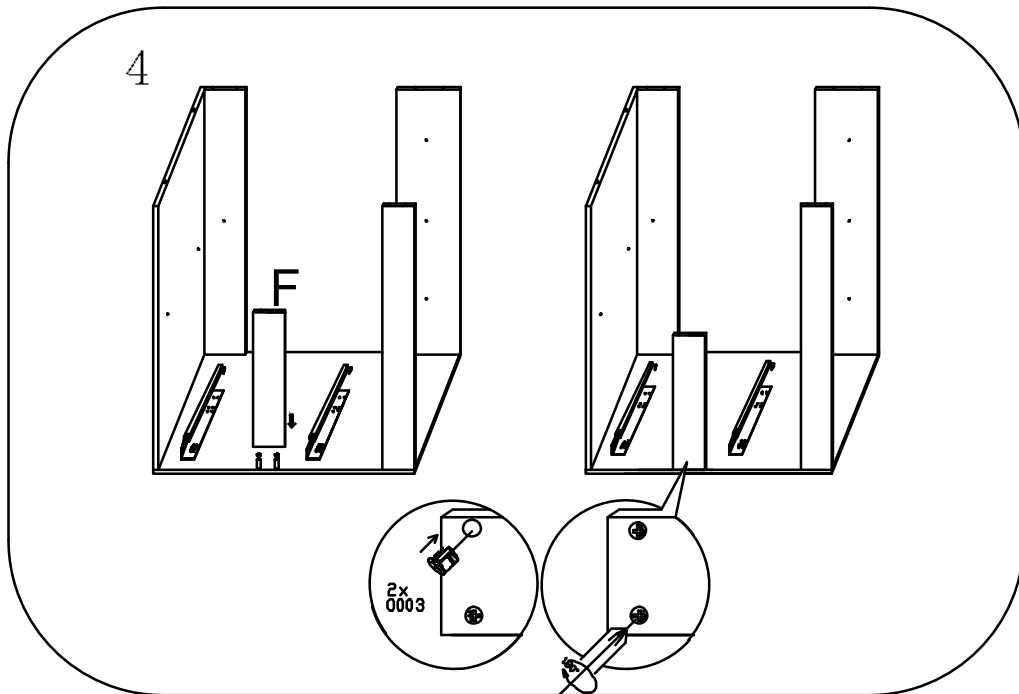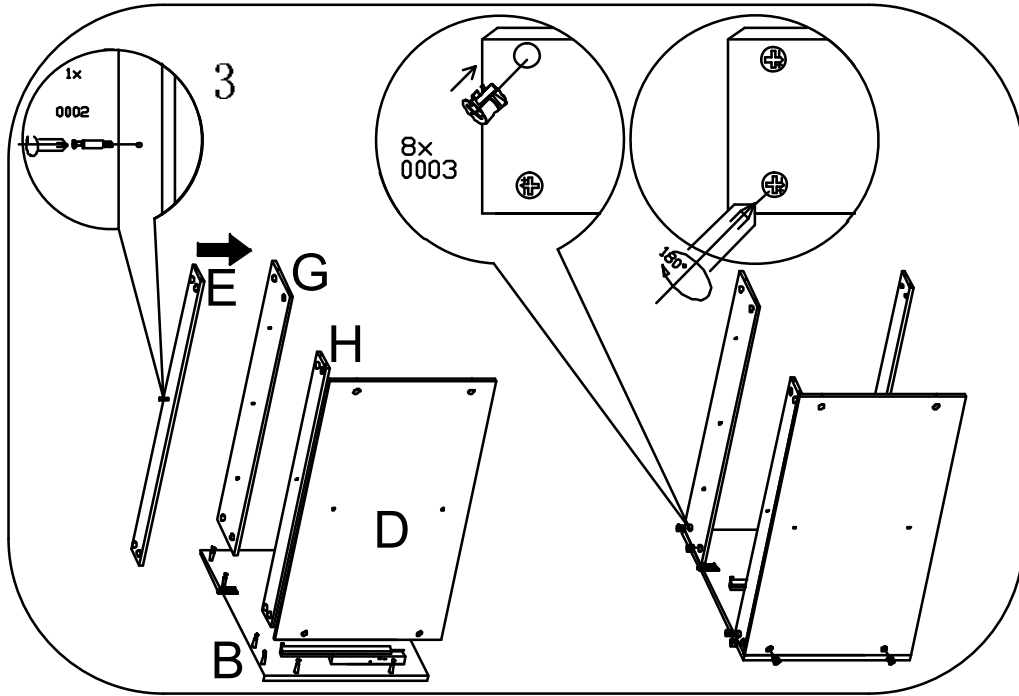


7

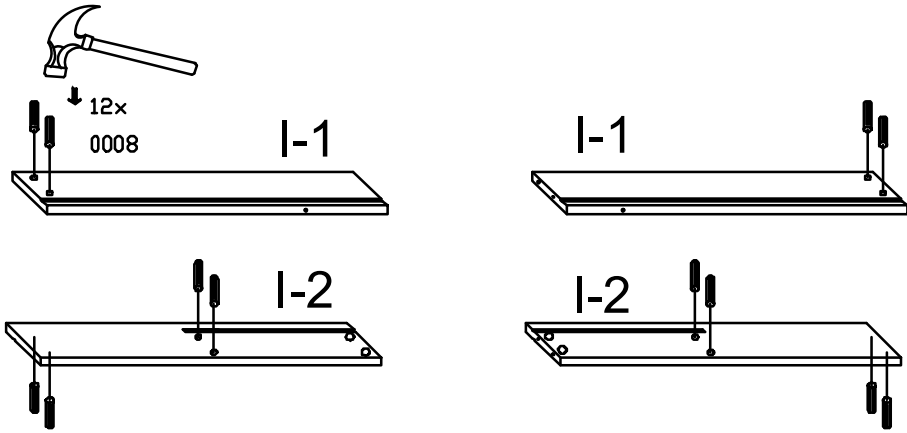


drawer1

9

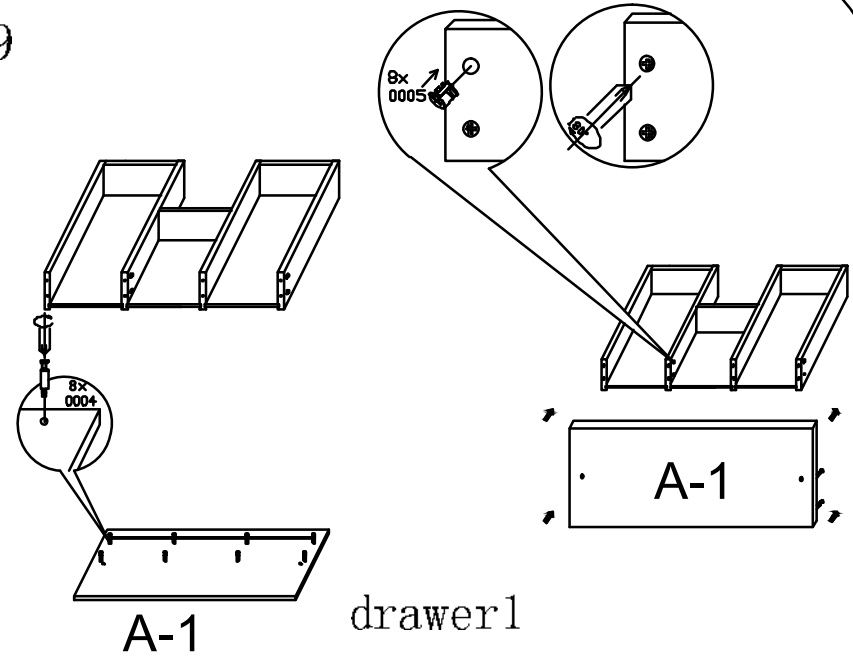


A-1 drawer1

8




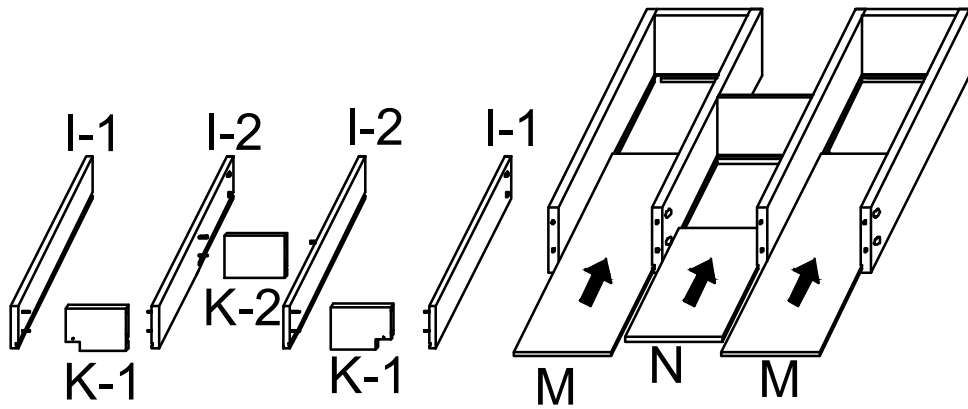


drawer1


10

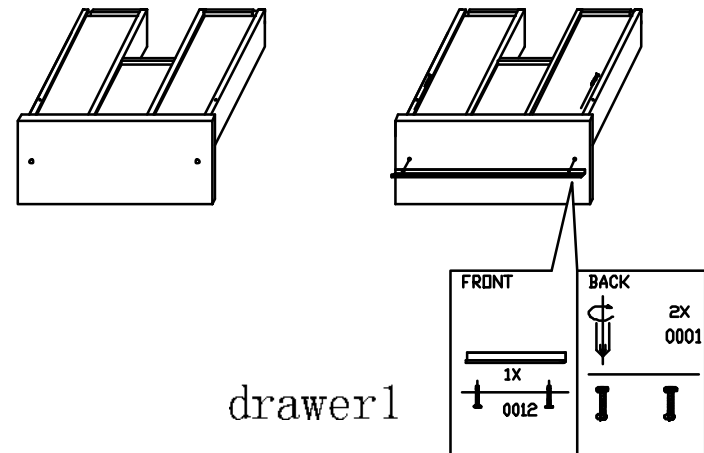



drawer1

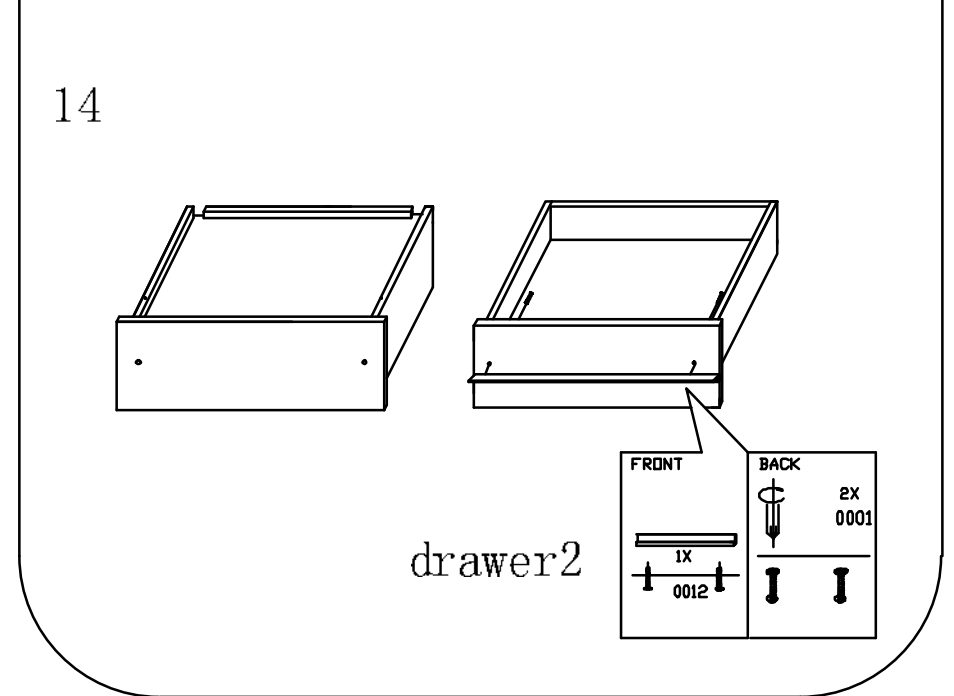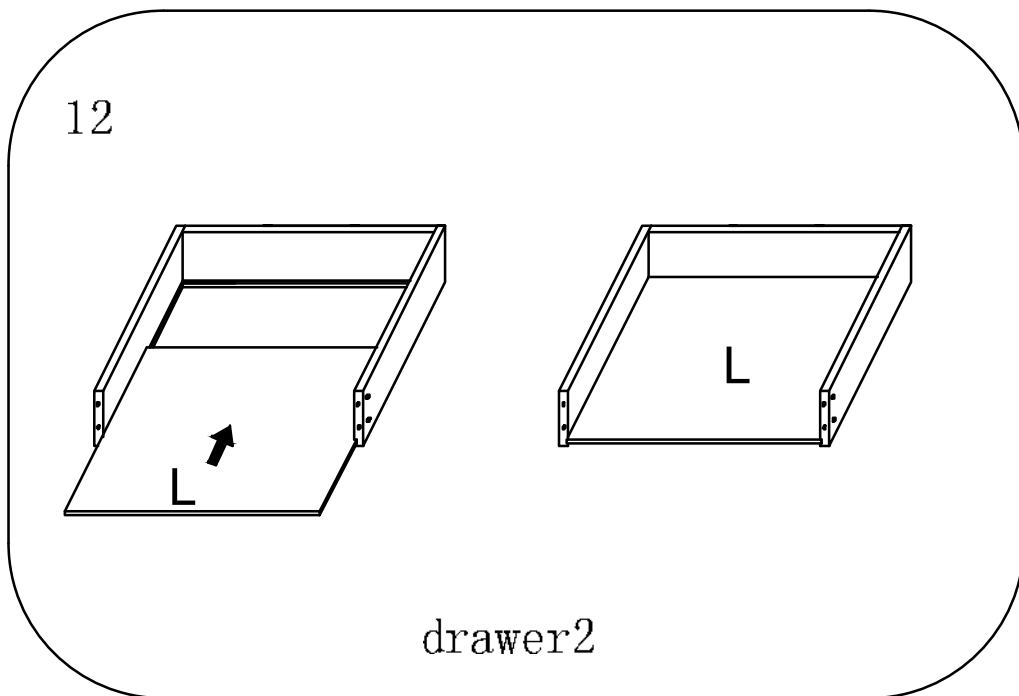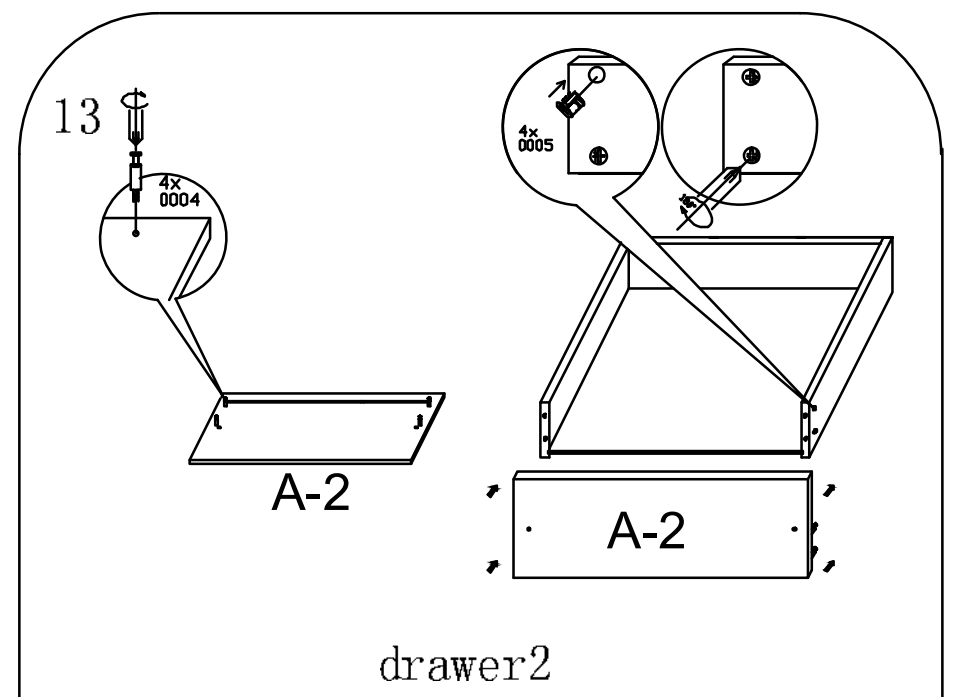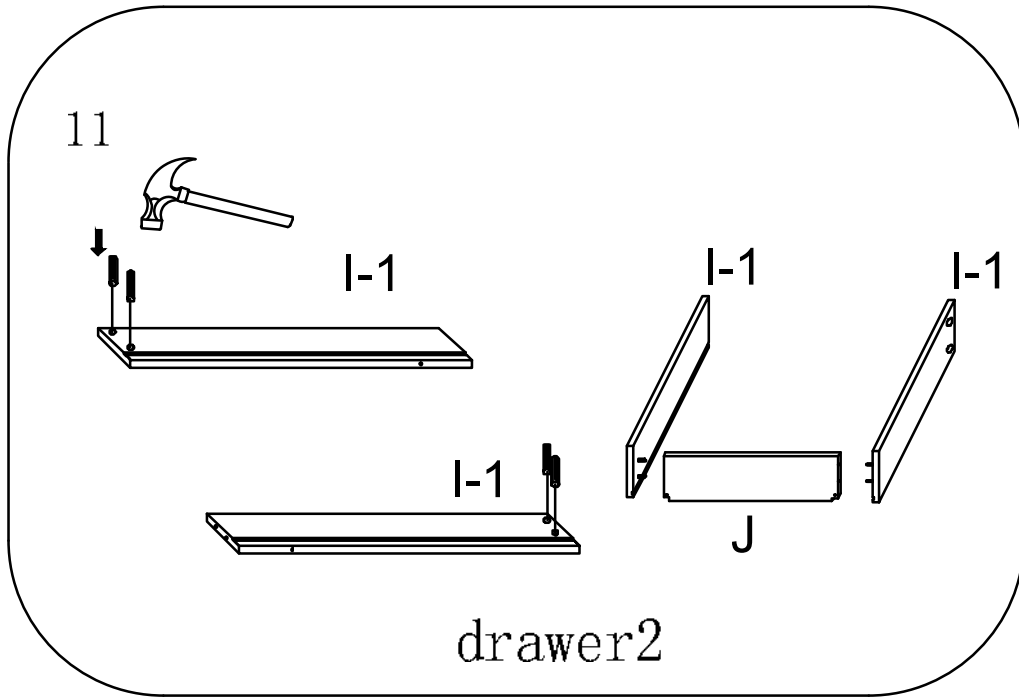


15

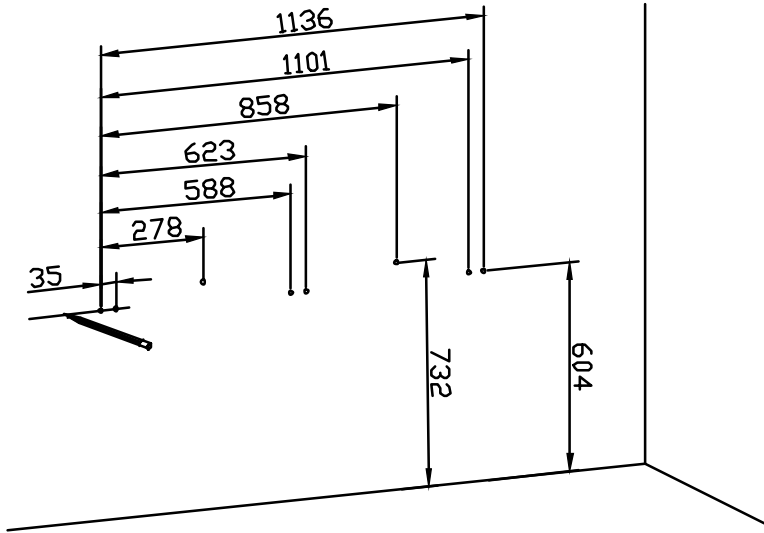


16

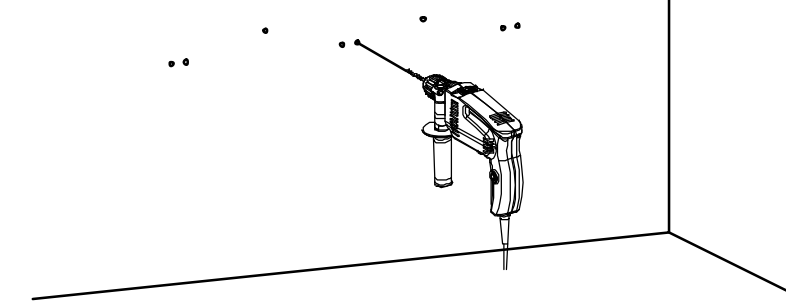
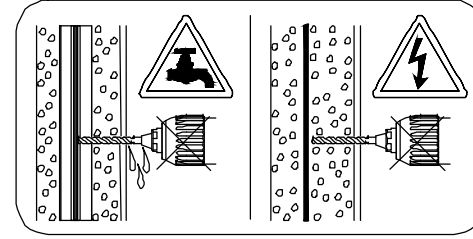


17

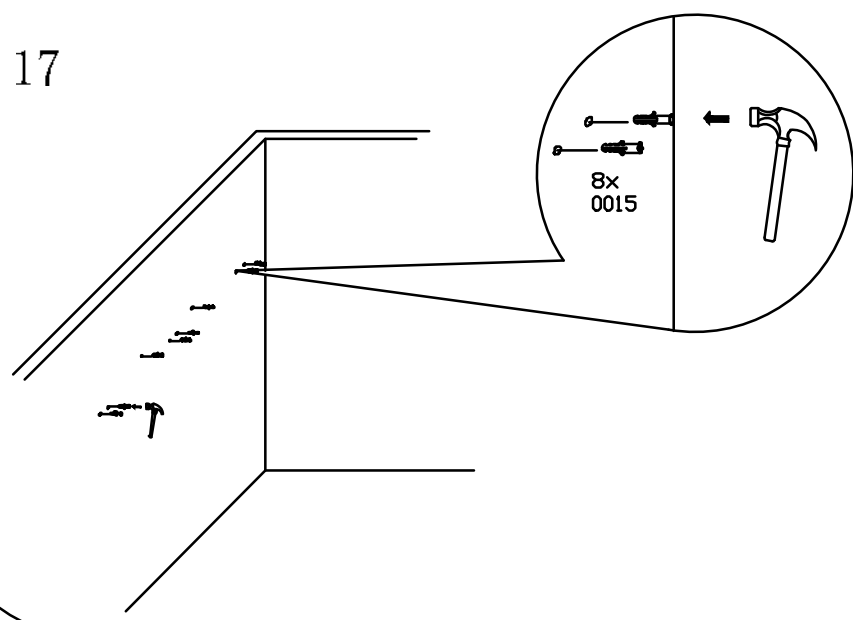


18

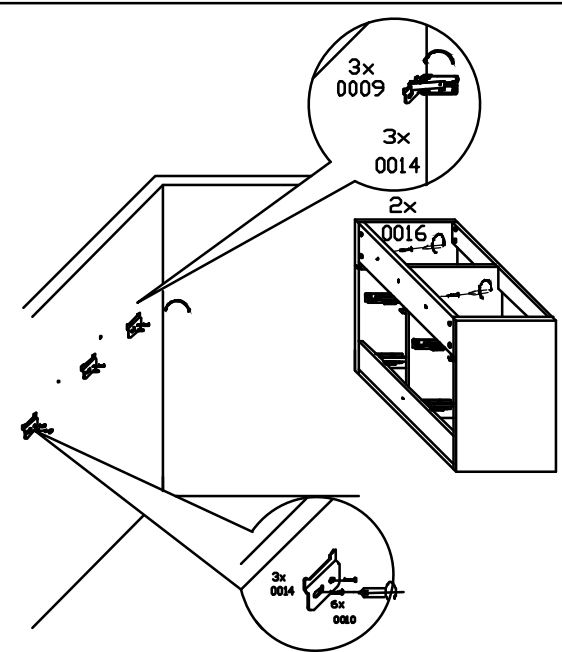

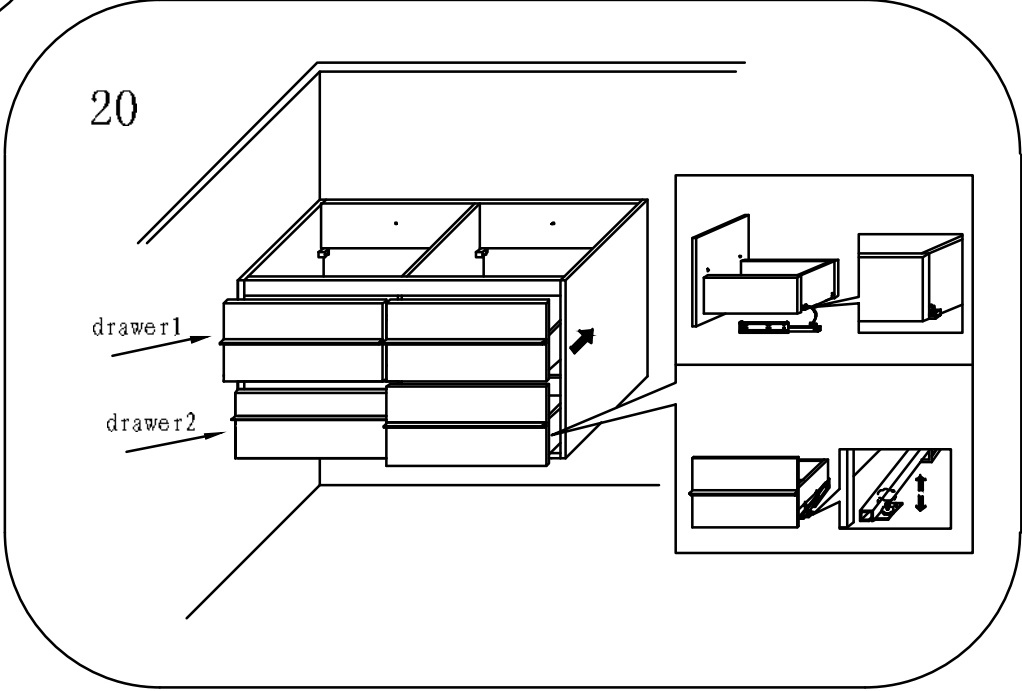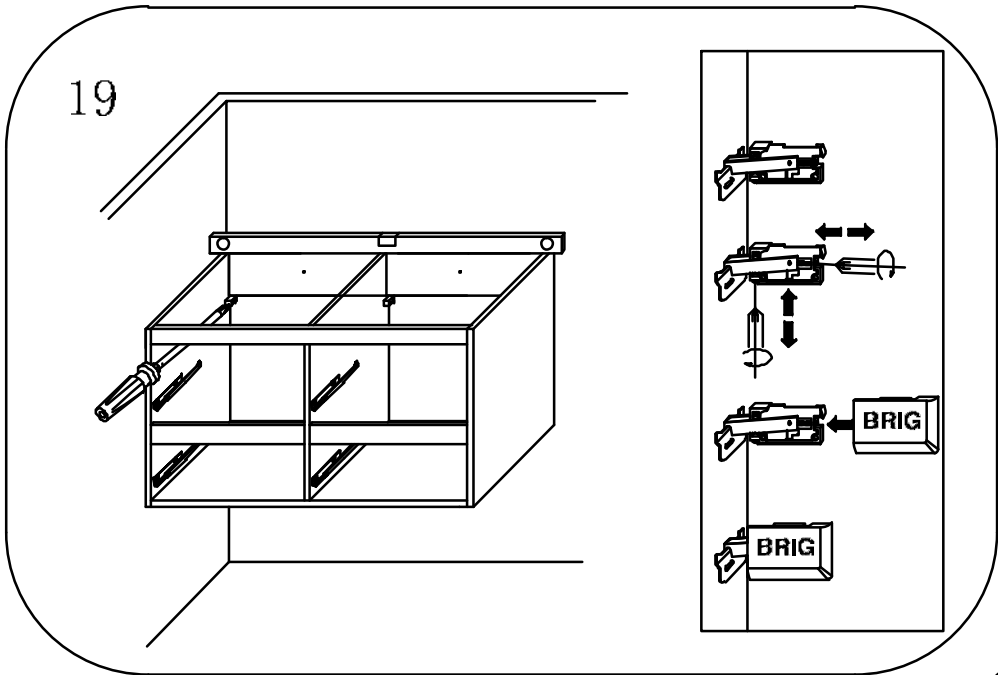

21

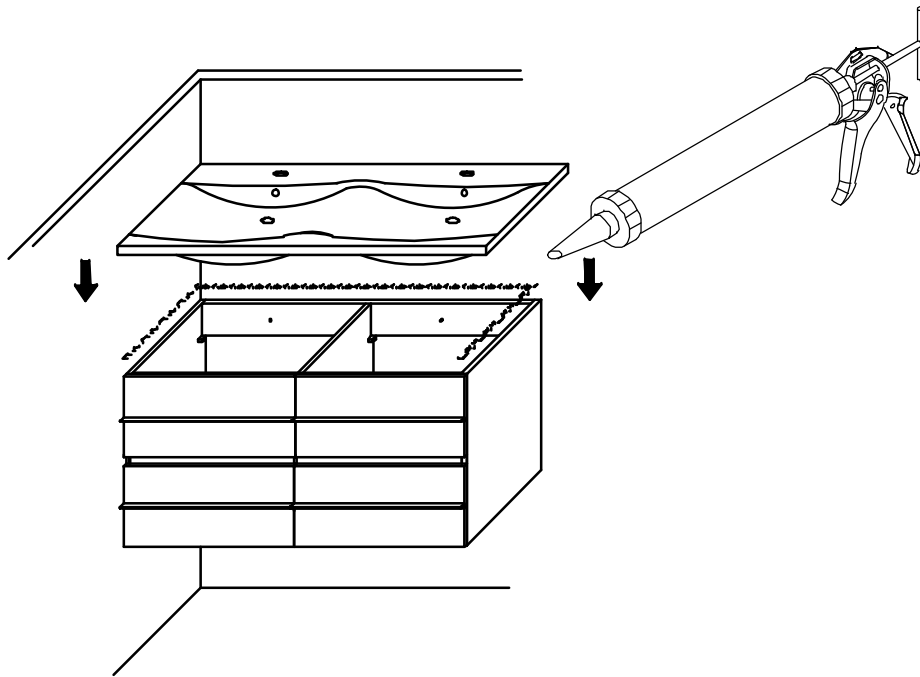

22

