
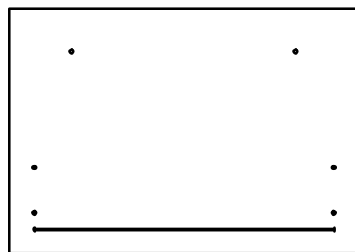
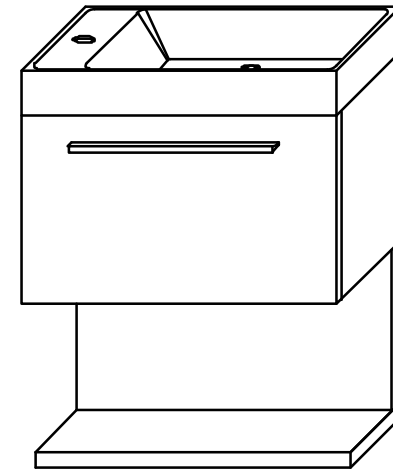



V-500N

Assembly instruction for bathroom cabinet t

tools

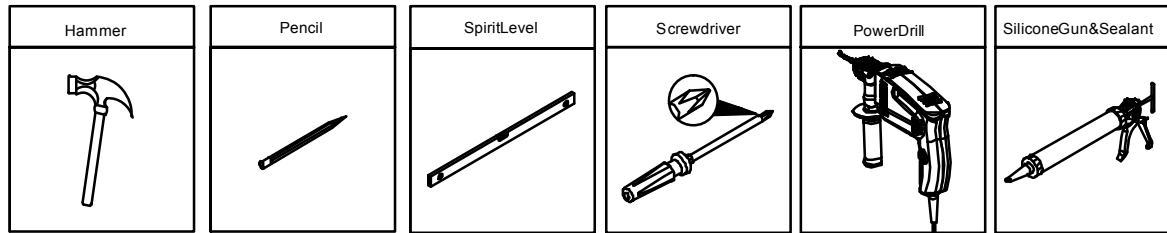


A:1X

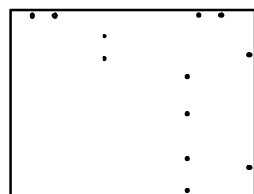


B:2X




C:1X

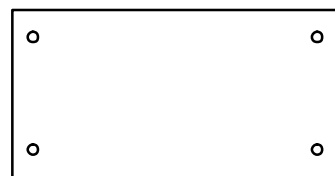

D:1X

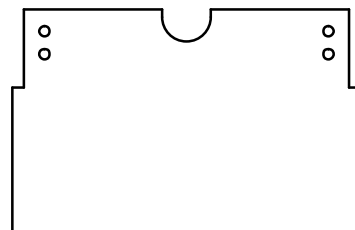


E:1X




F:2X






G:1X



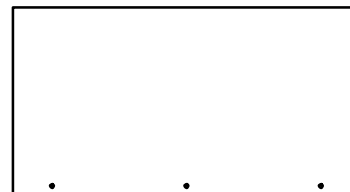






H:1X




I:1X

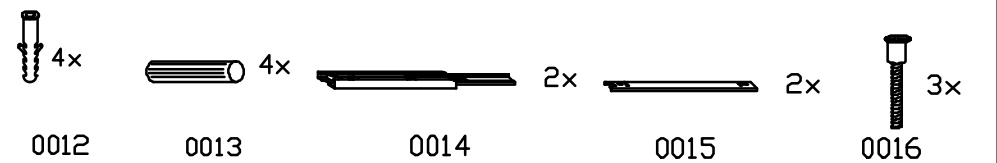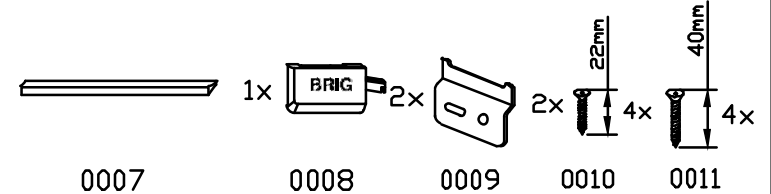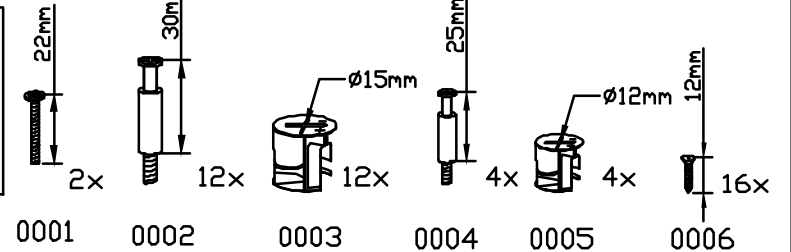

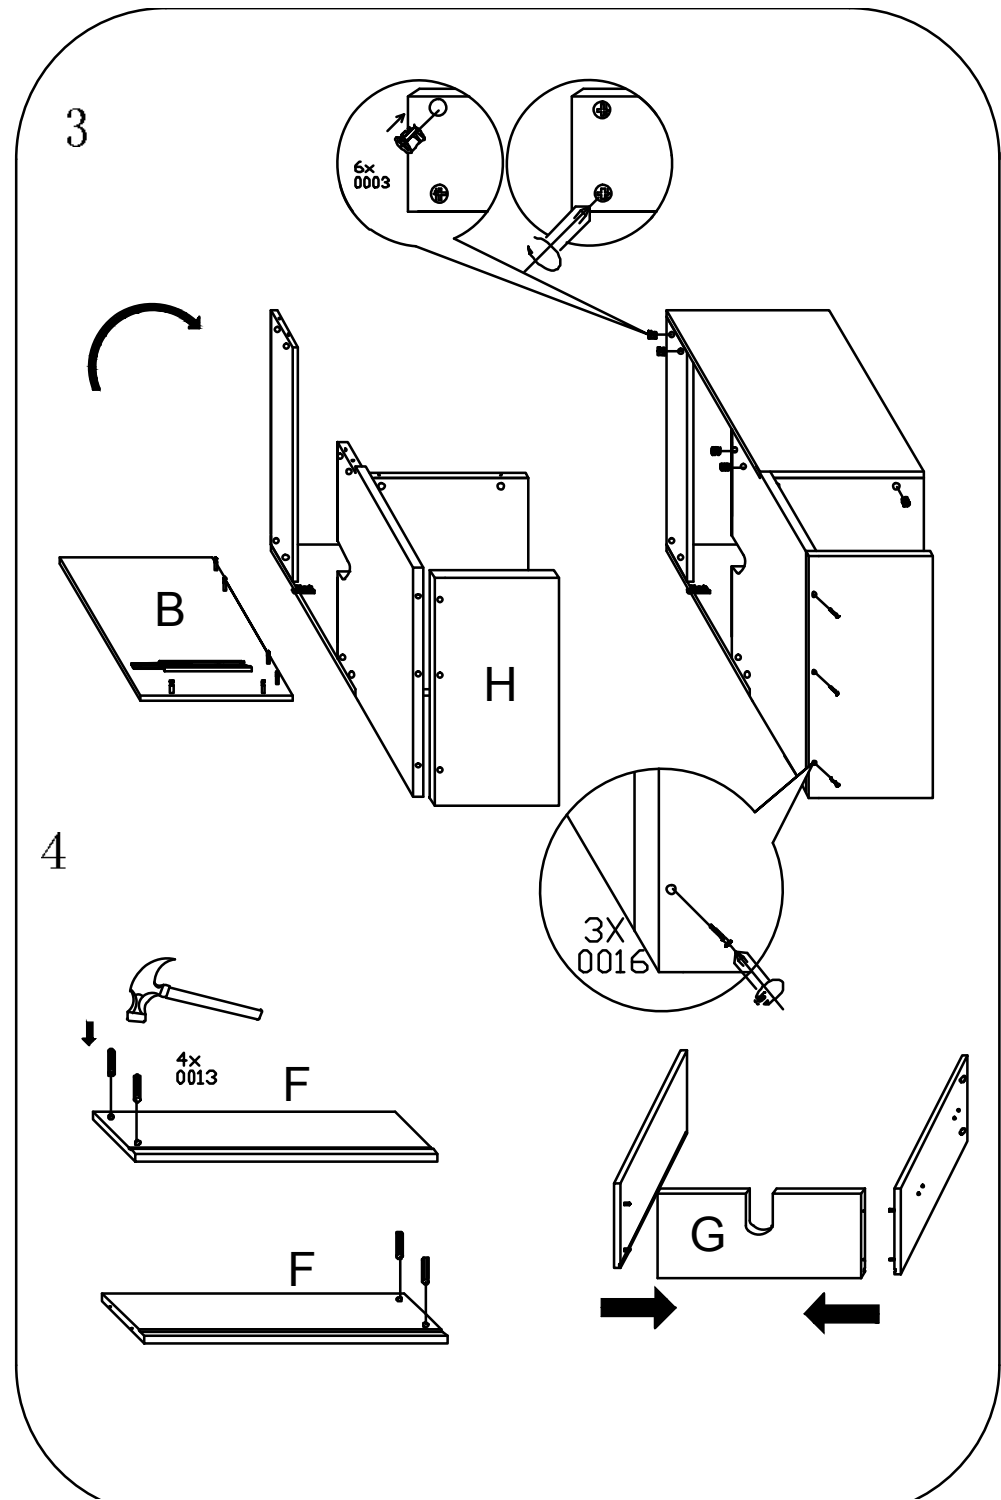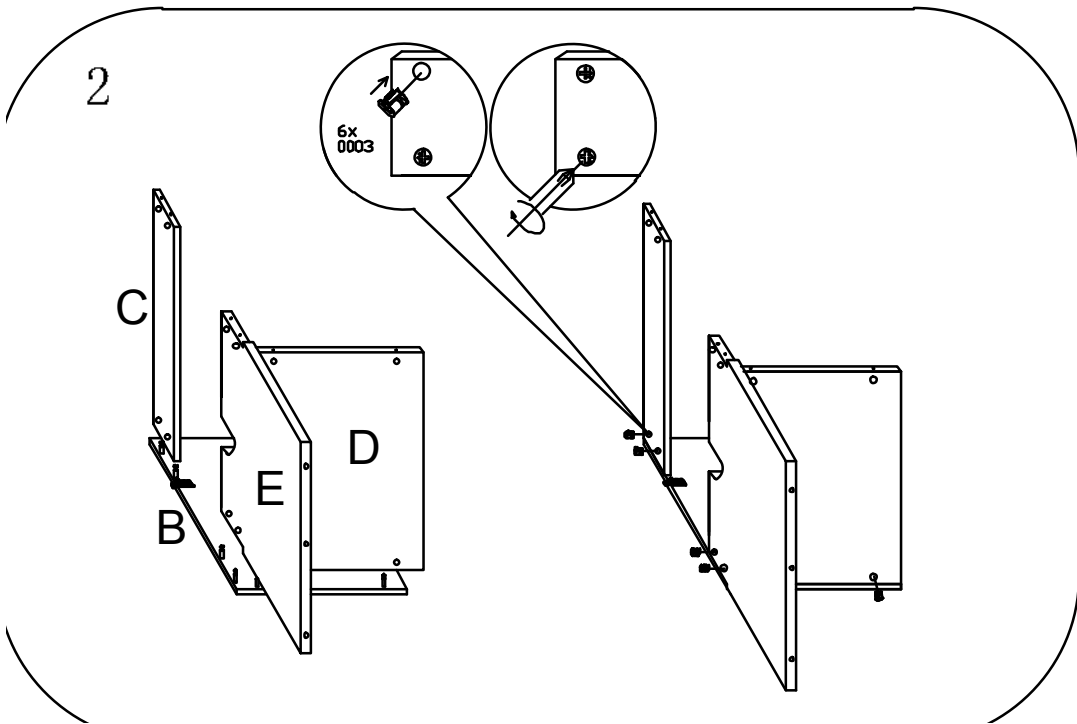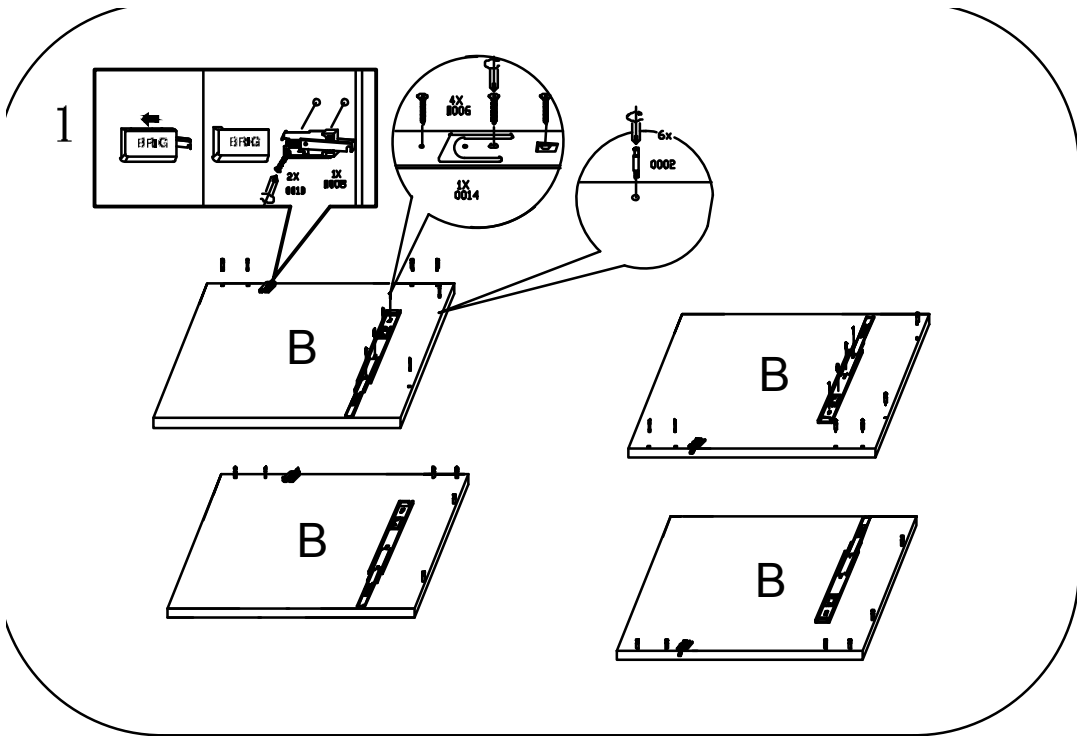


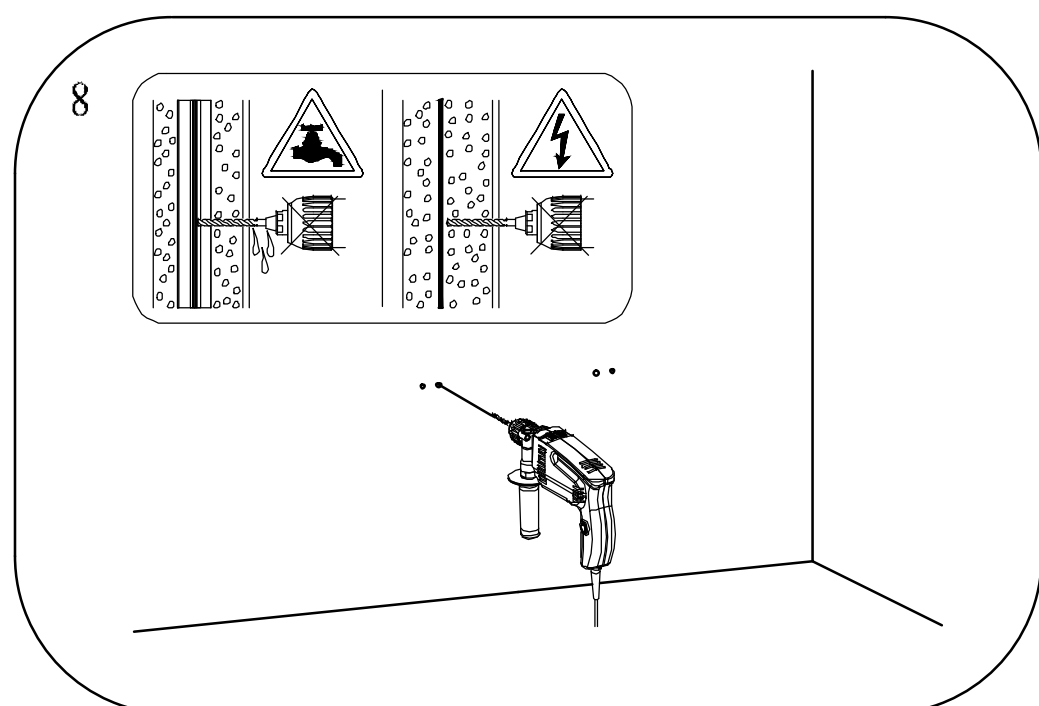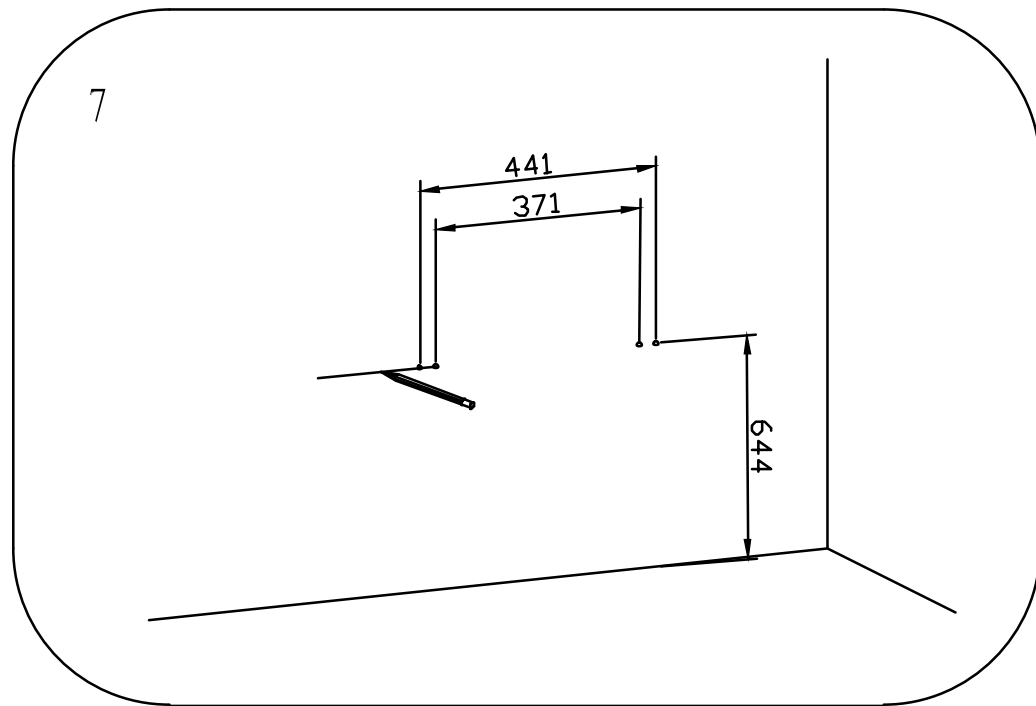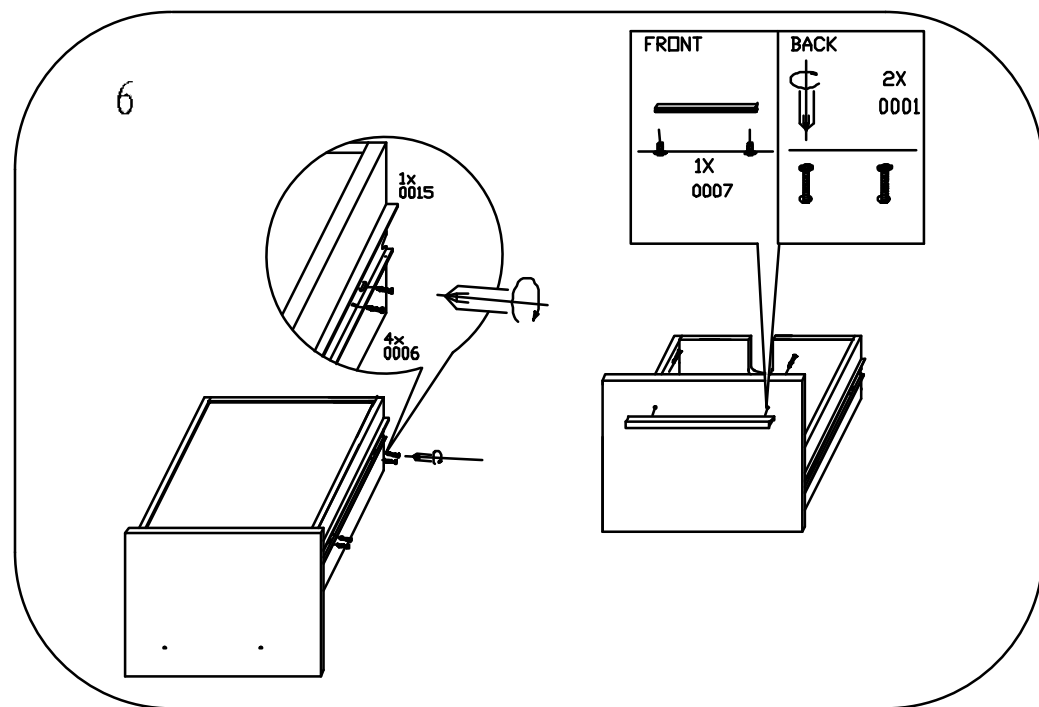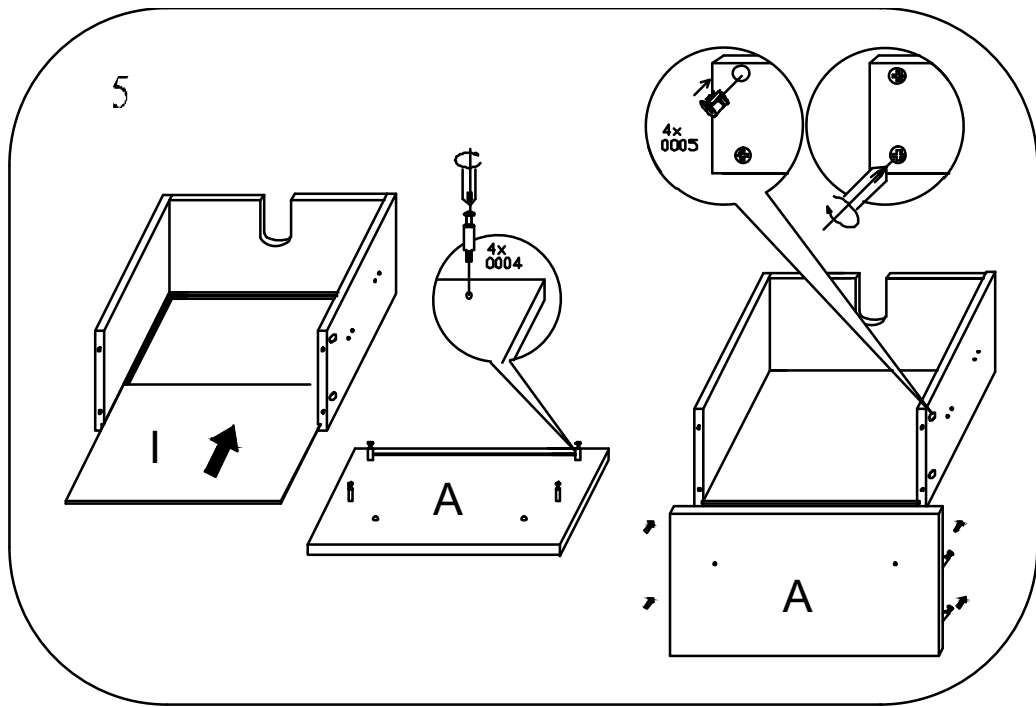


9

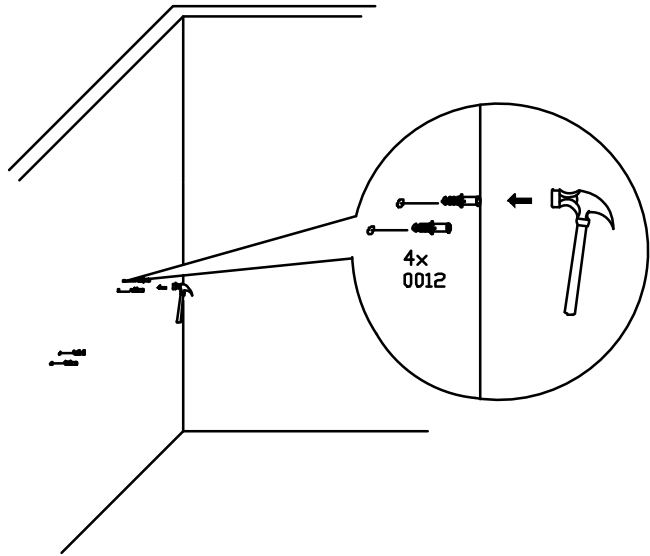


10

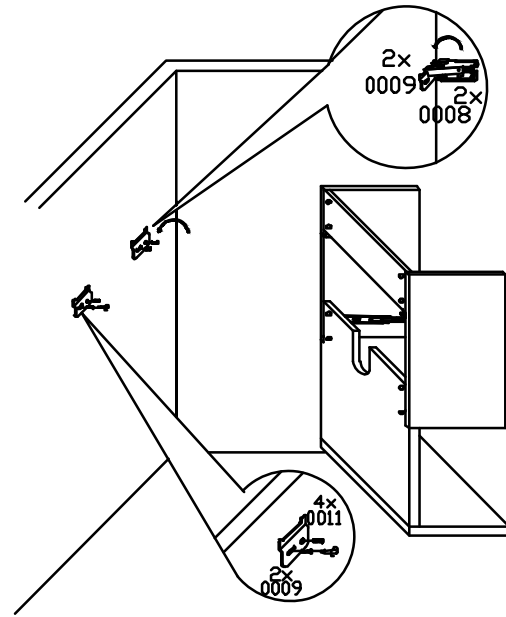


11

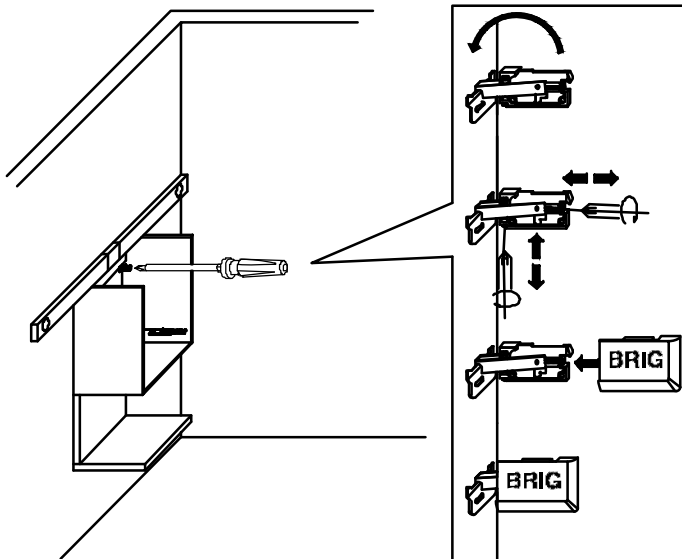

12

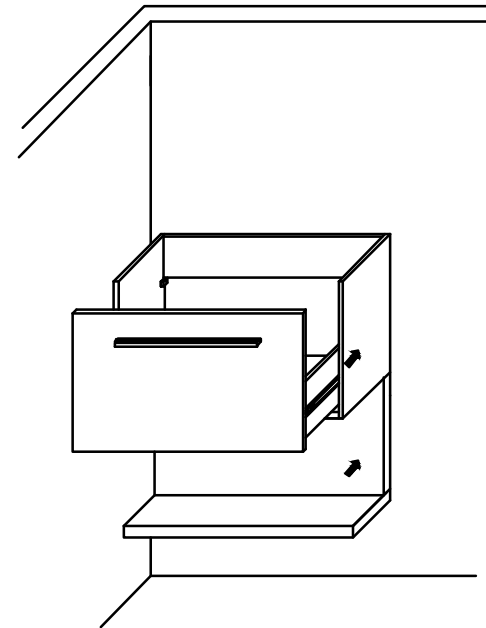

13

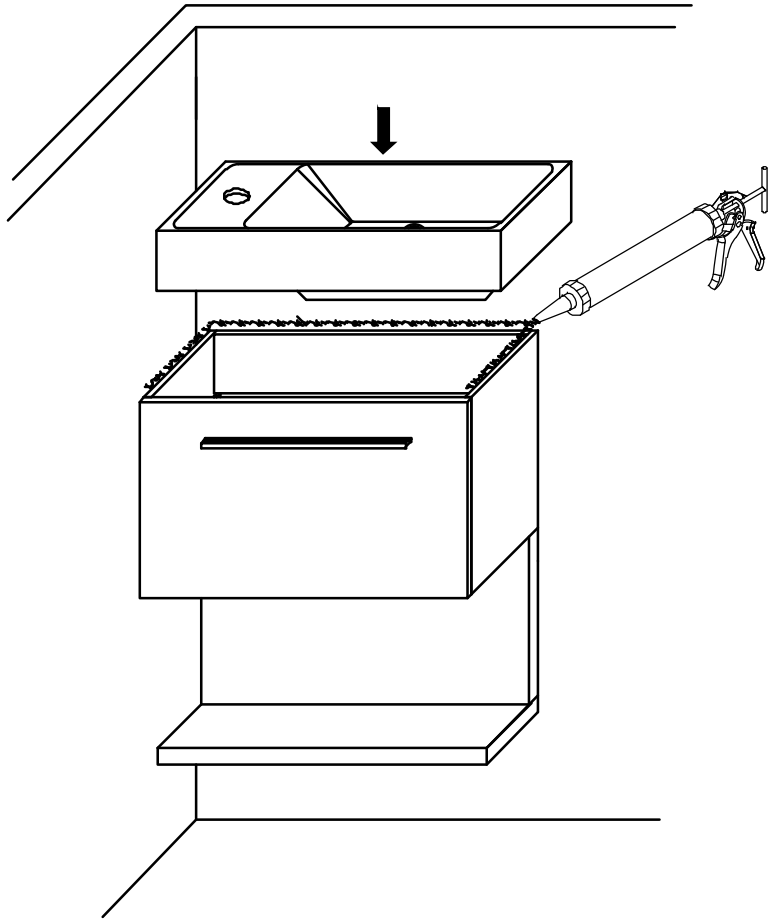

14

