

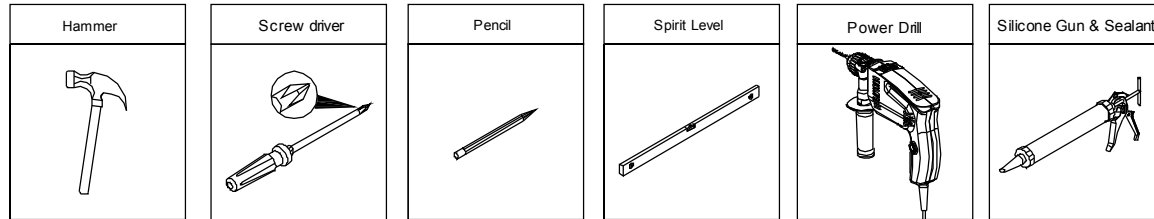



CORDOBA 900

SPECIFICATION FOR BATHROOM CABINET ASSEMBLE

tools

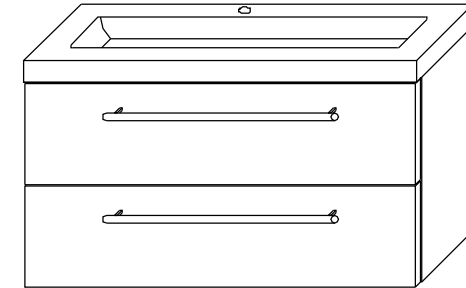

A-1:1X




A-2:1X



K:1X



L:2X

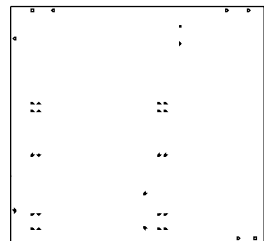


B:2X




C:1X




M:1X

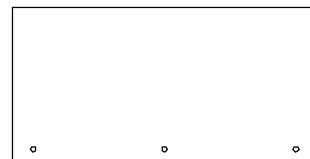

N:1X



D:1X




E:1X




F:1X



G:1X




H:2X



I:2X




J:2X




O:2X




P:1X




0001 4x




0002 20x




0003 20x




0004 15x



0005 15x




0006 32x



0007 4x




0008 2x

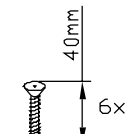


0009 6x



0010 2x




0011 2x



0012 23x




0013 8x



0014 4x





0015 2x









0016 2x

1

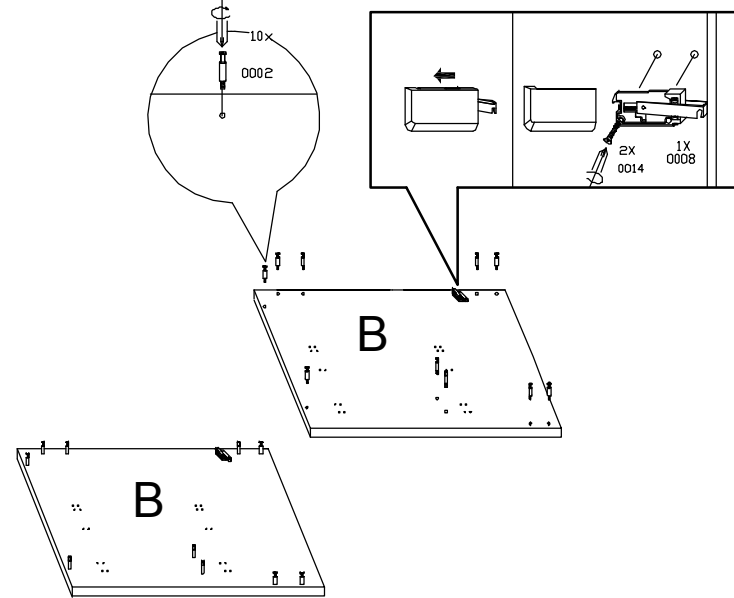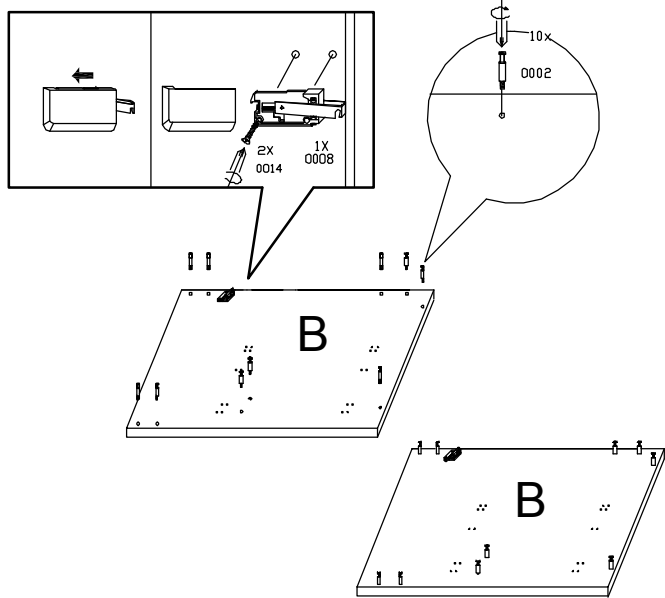


2

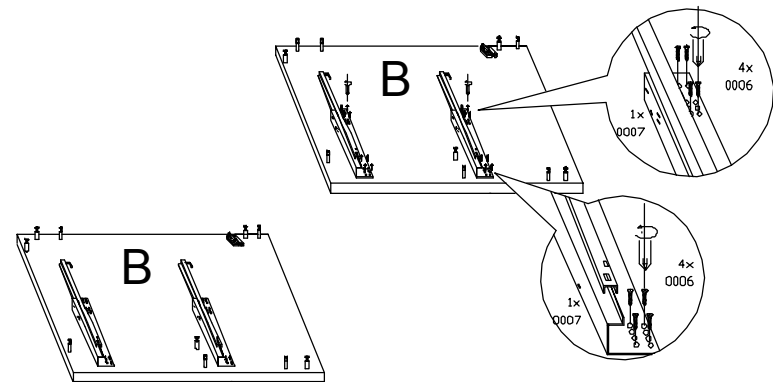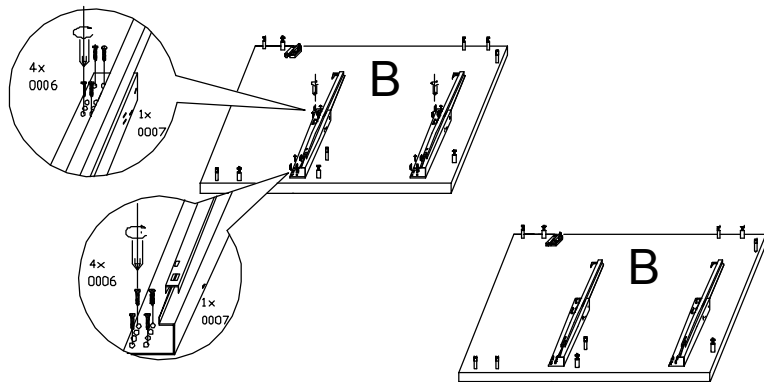


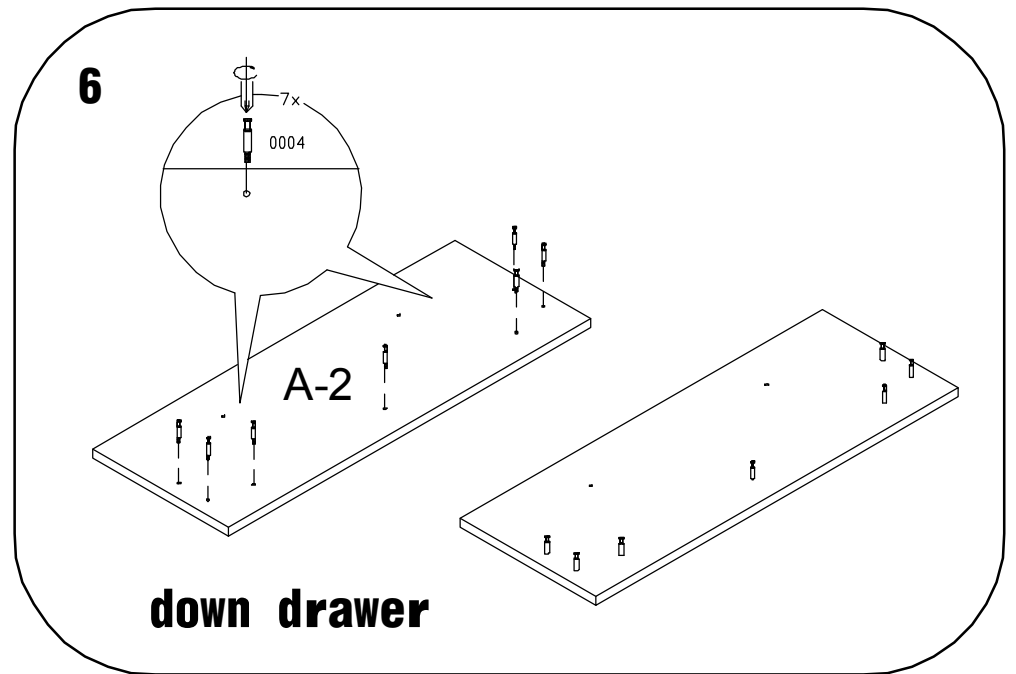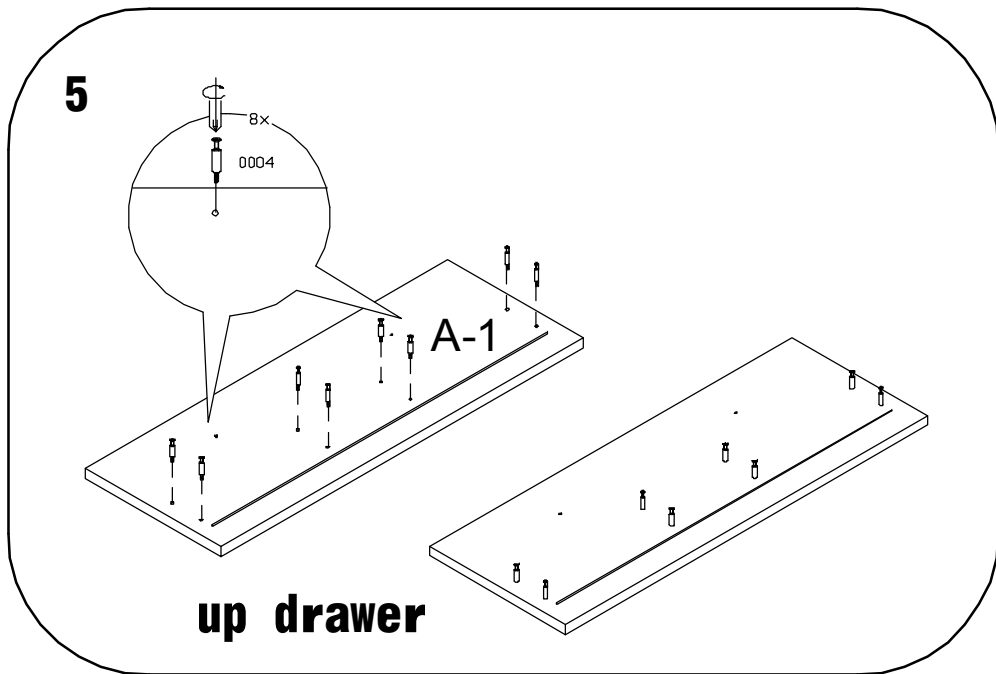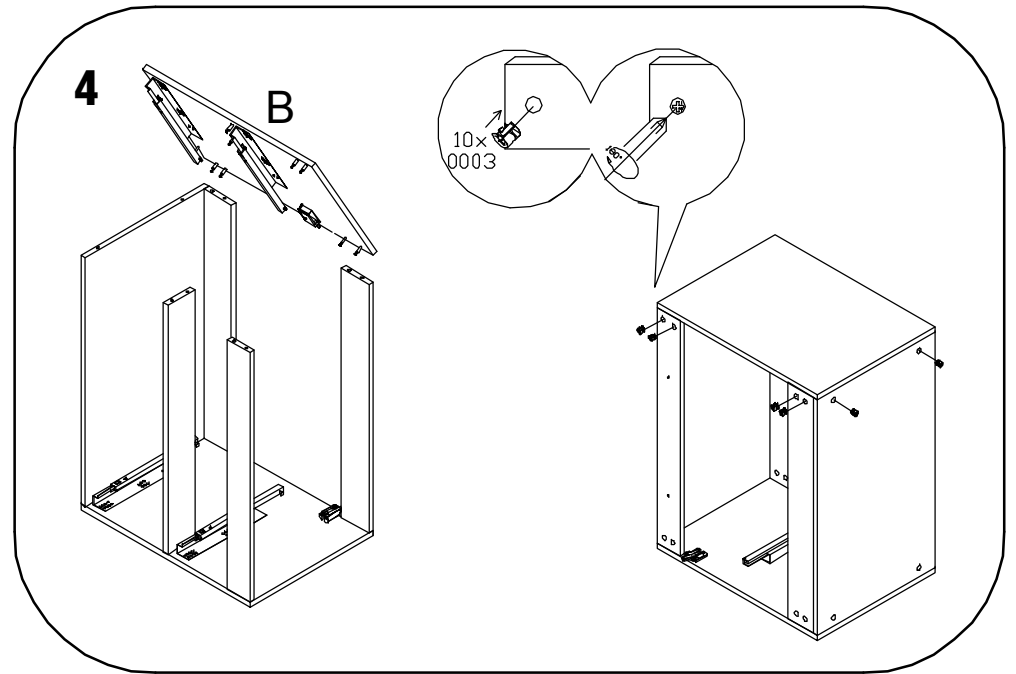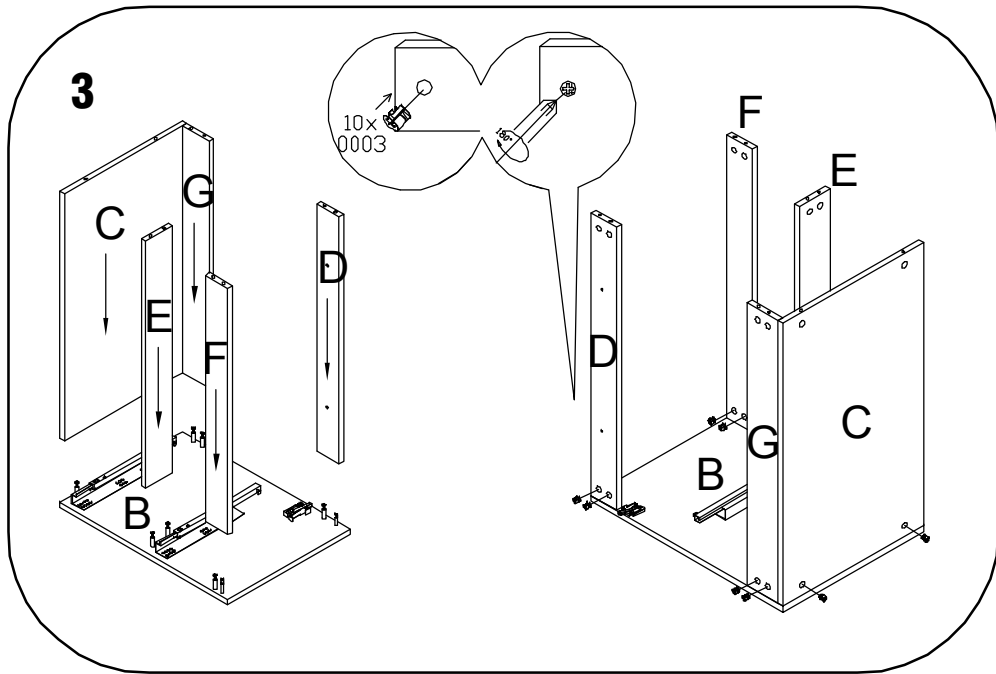


7

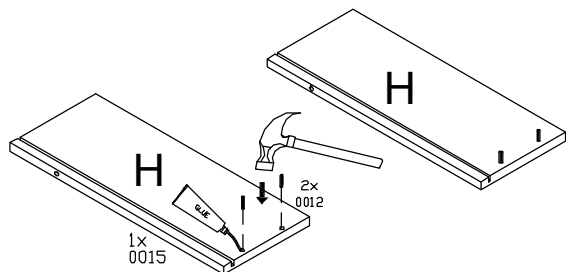

8

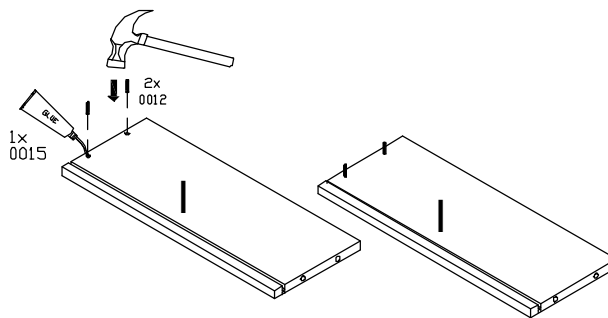


9

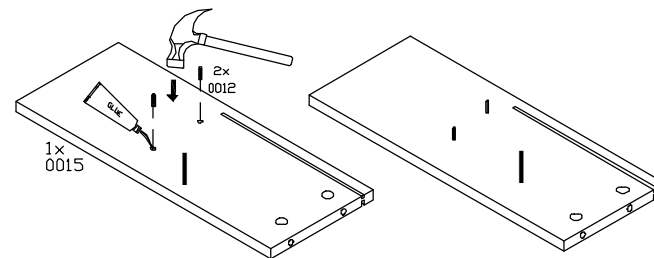


up drawer

10

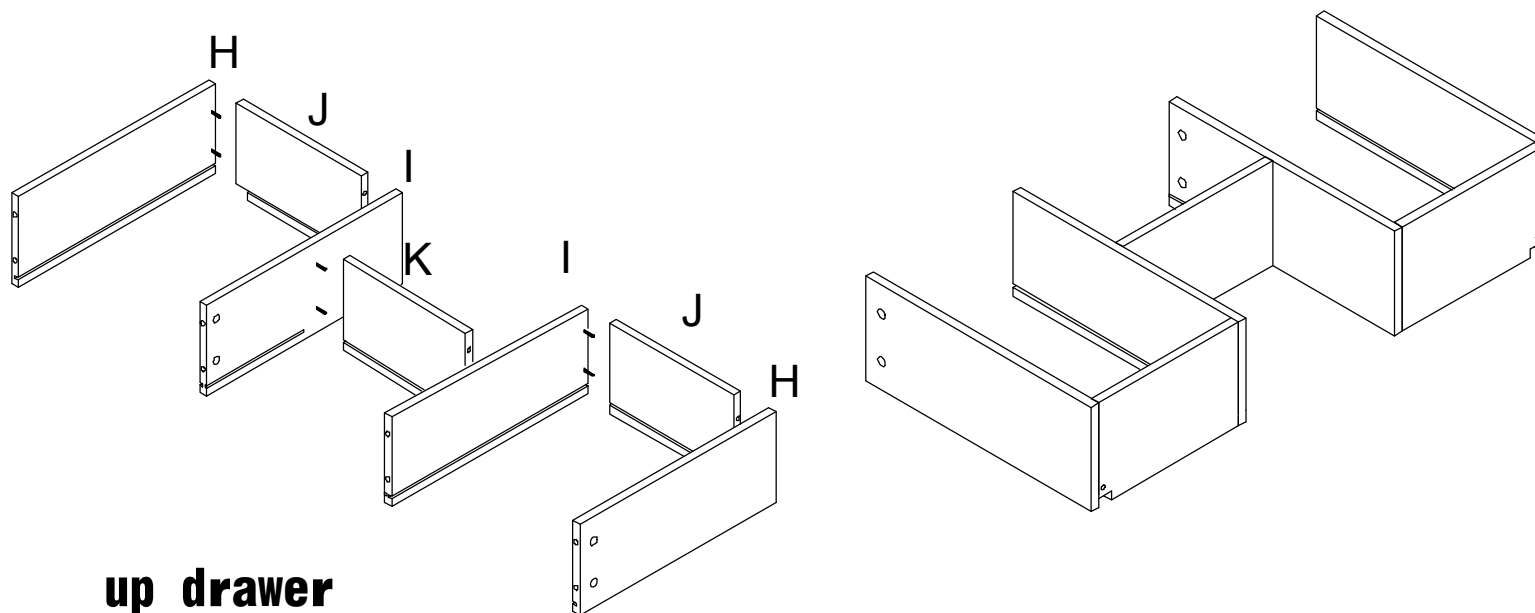


up drawer

11

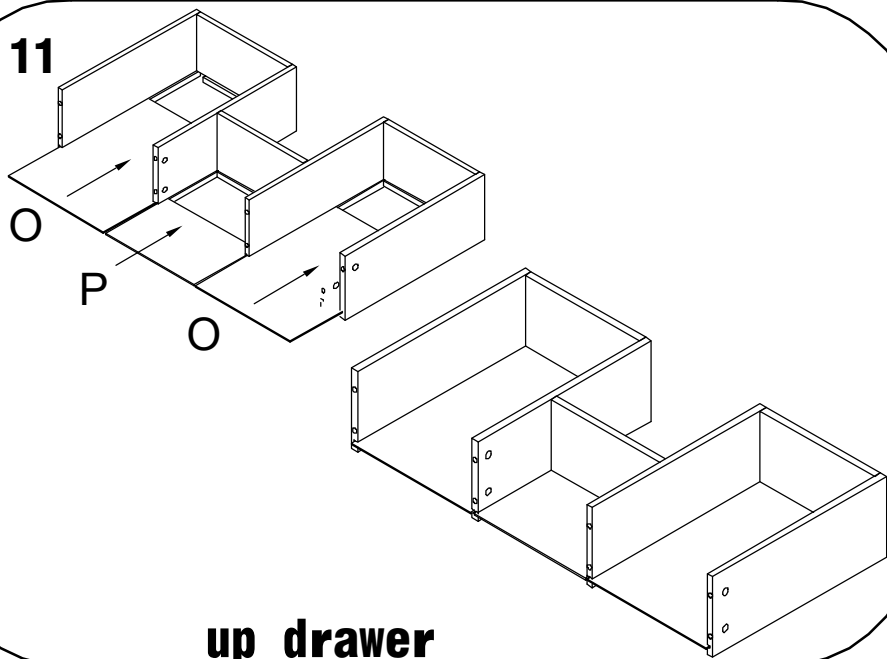


up drawer

12

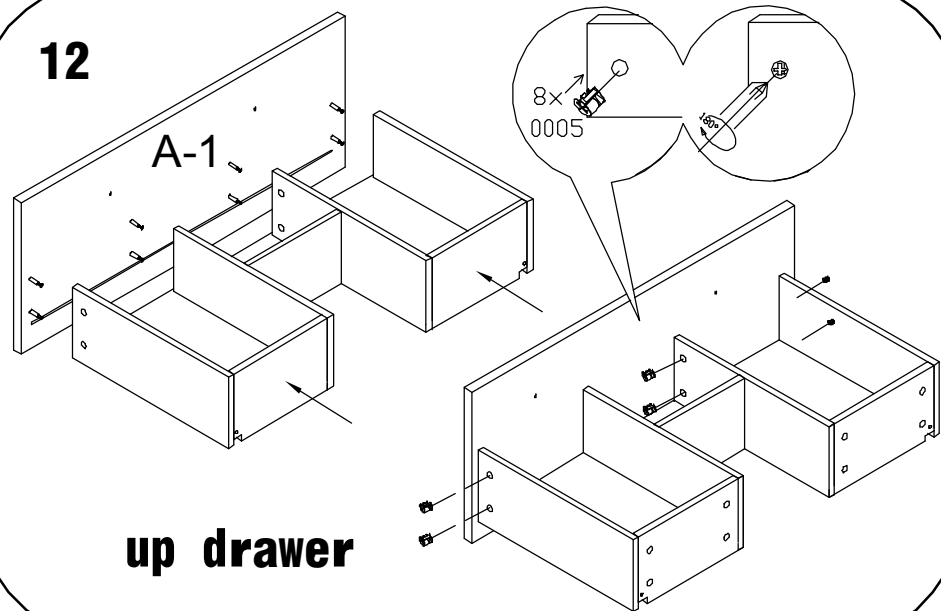


up drawer

13

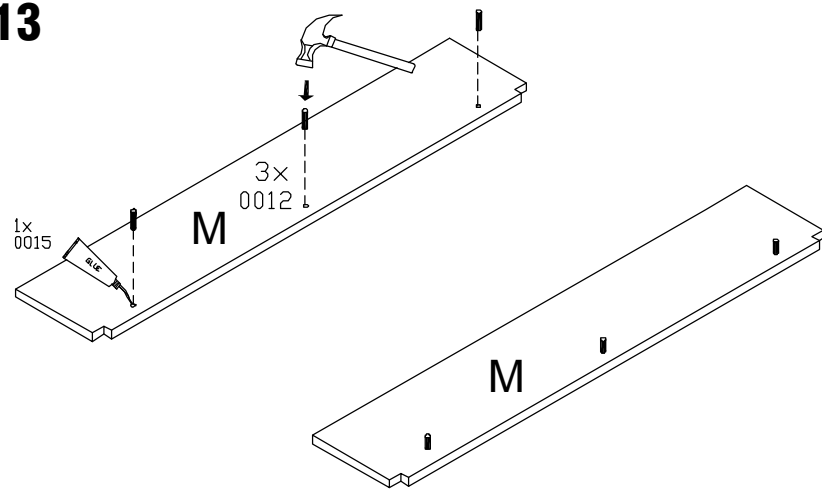


down drawer

14

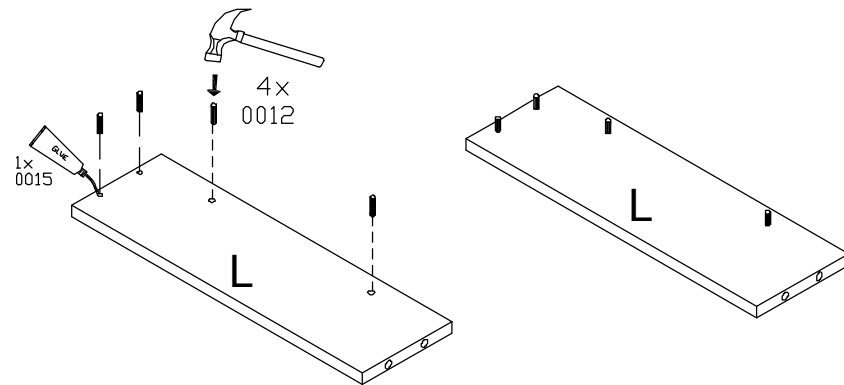


down drawer

15

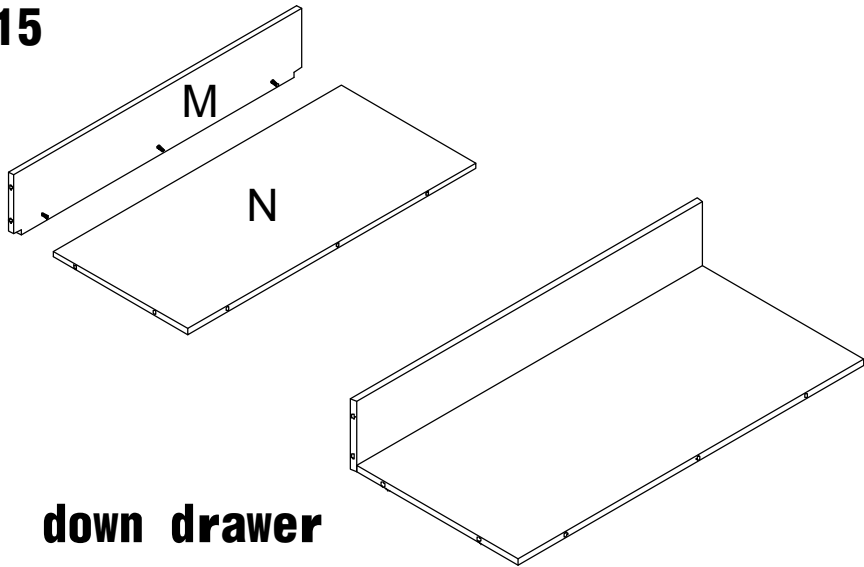


down drawer

16

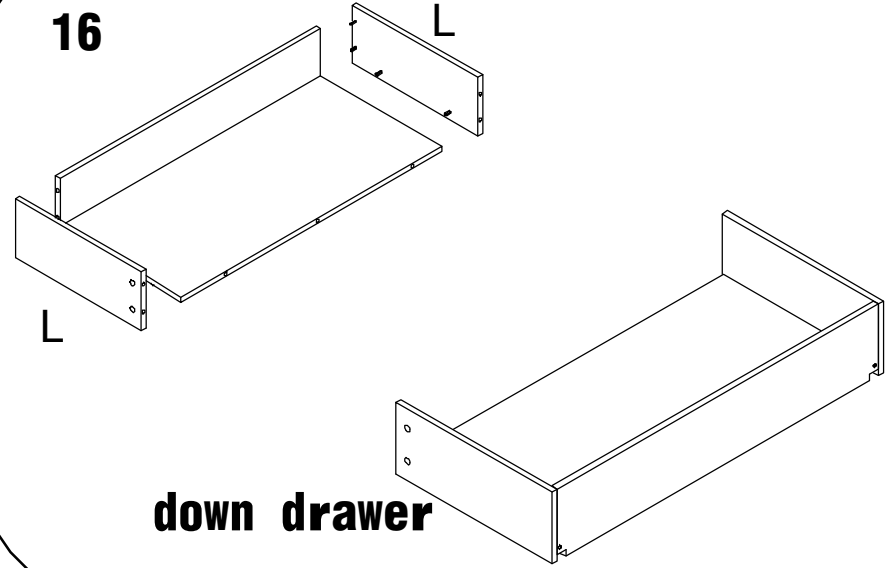


down drawer

17

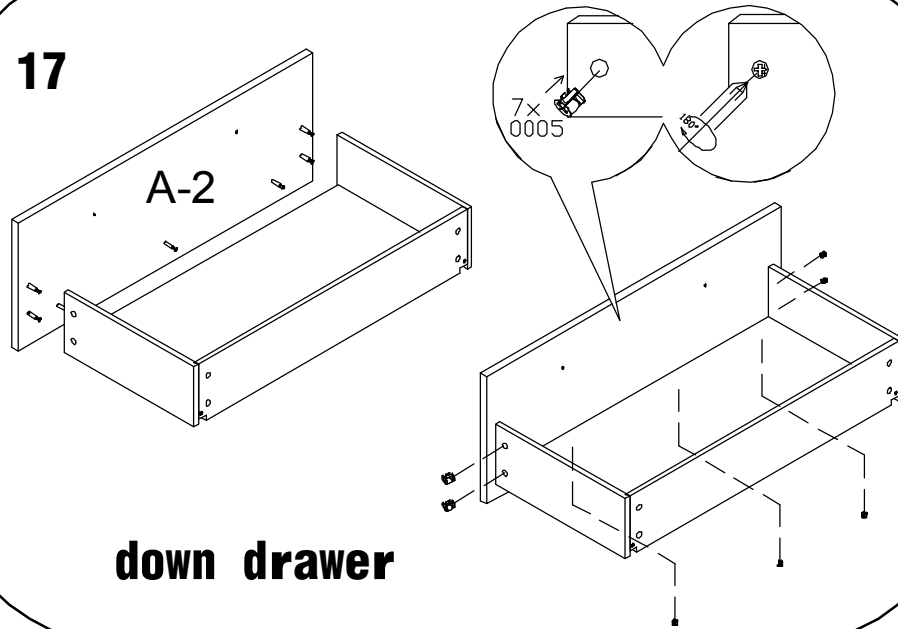

down drawer


18

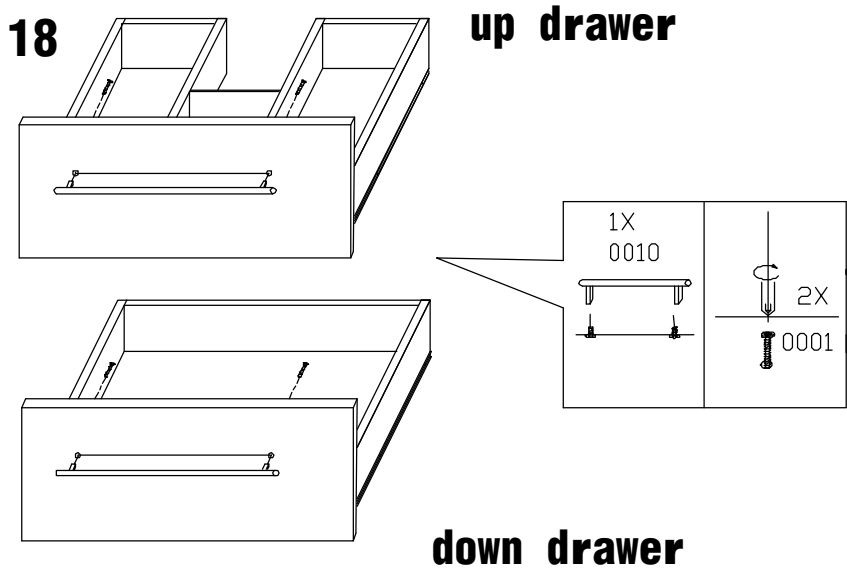



up drawer

down drawer


19

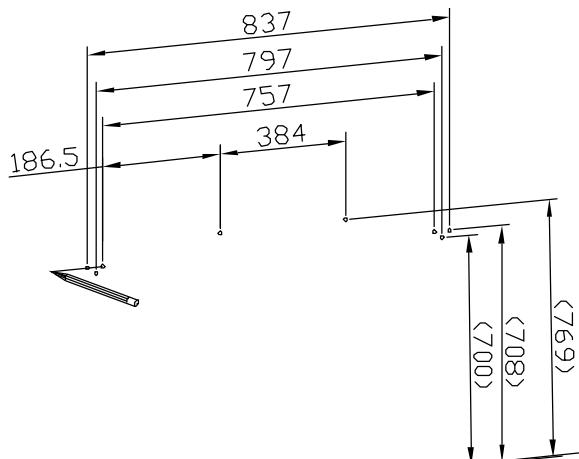


20

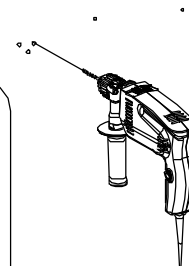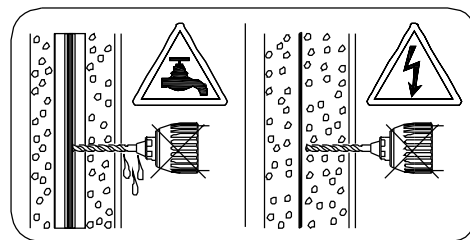


21

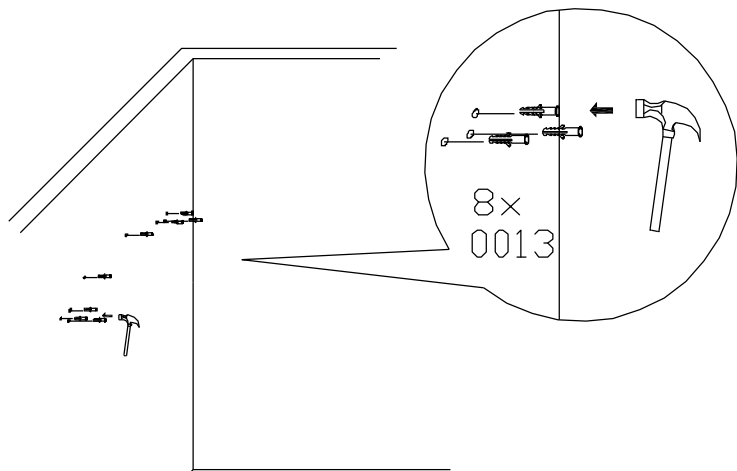


22

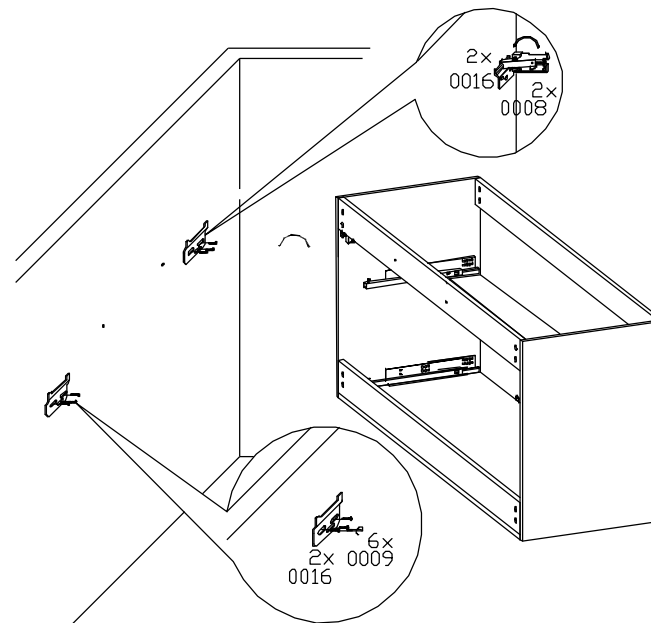


23

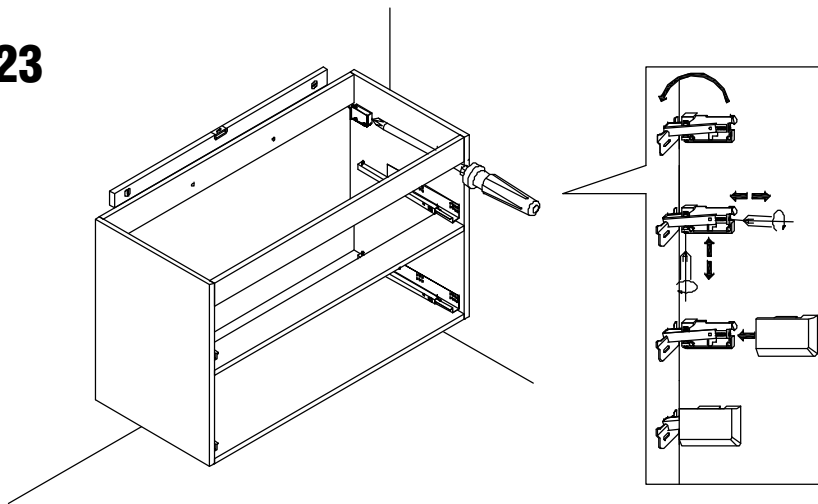

24

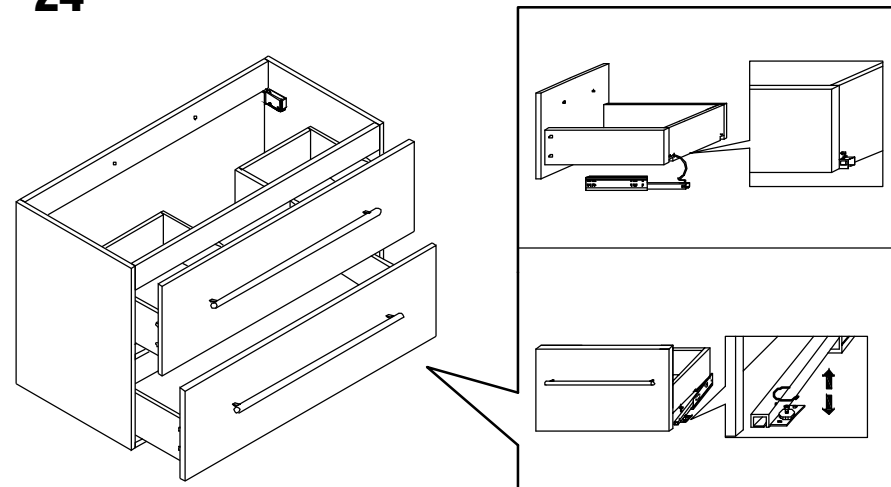

25

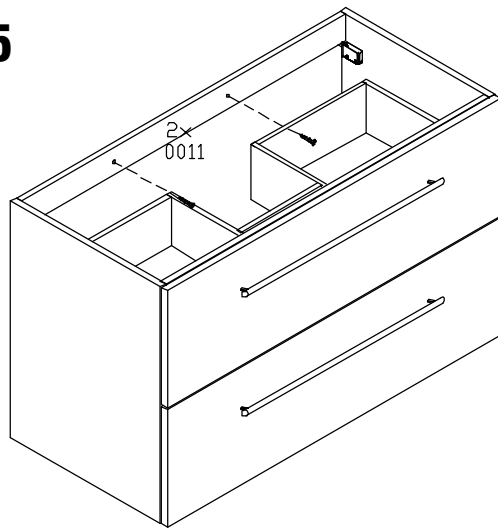

26

